 



Control Head Position During Scanning


Lack of Head Position Control



Lack of Head Position Control

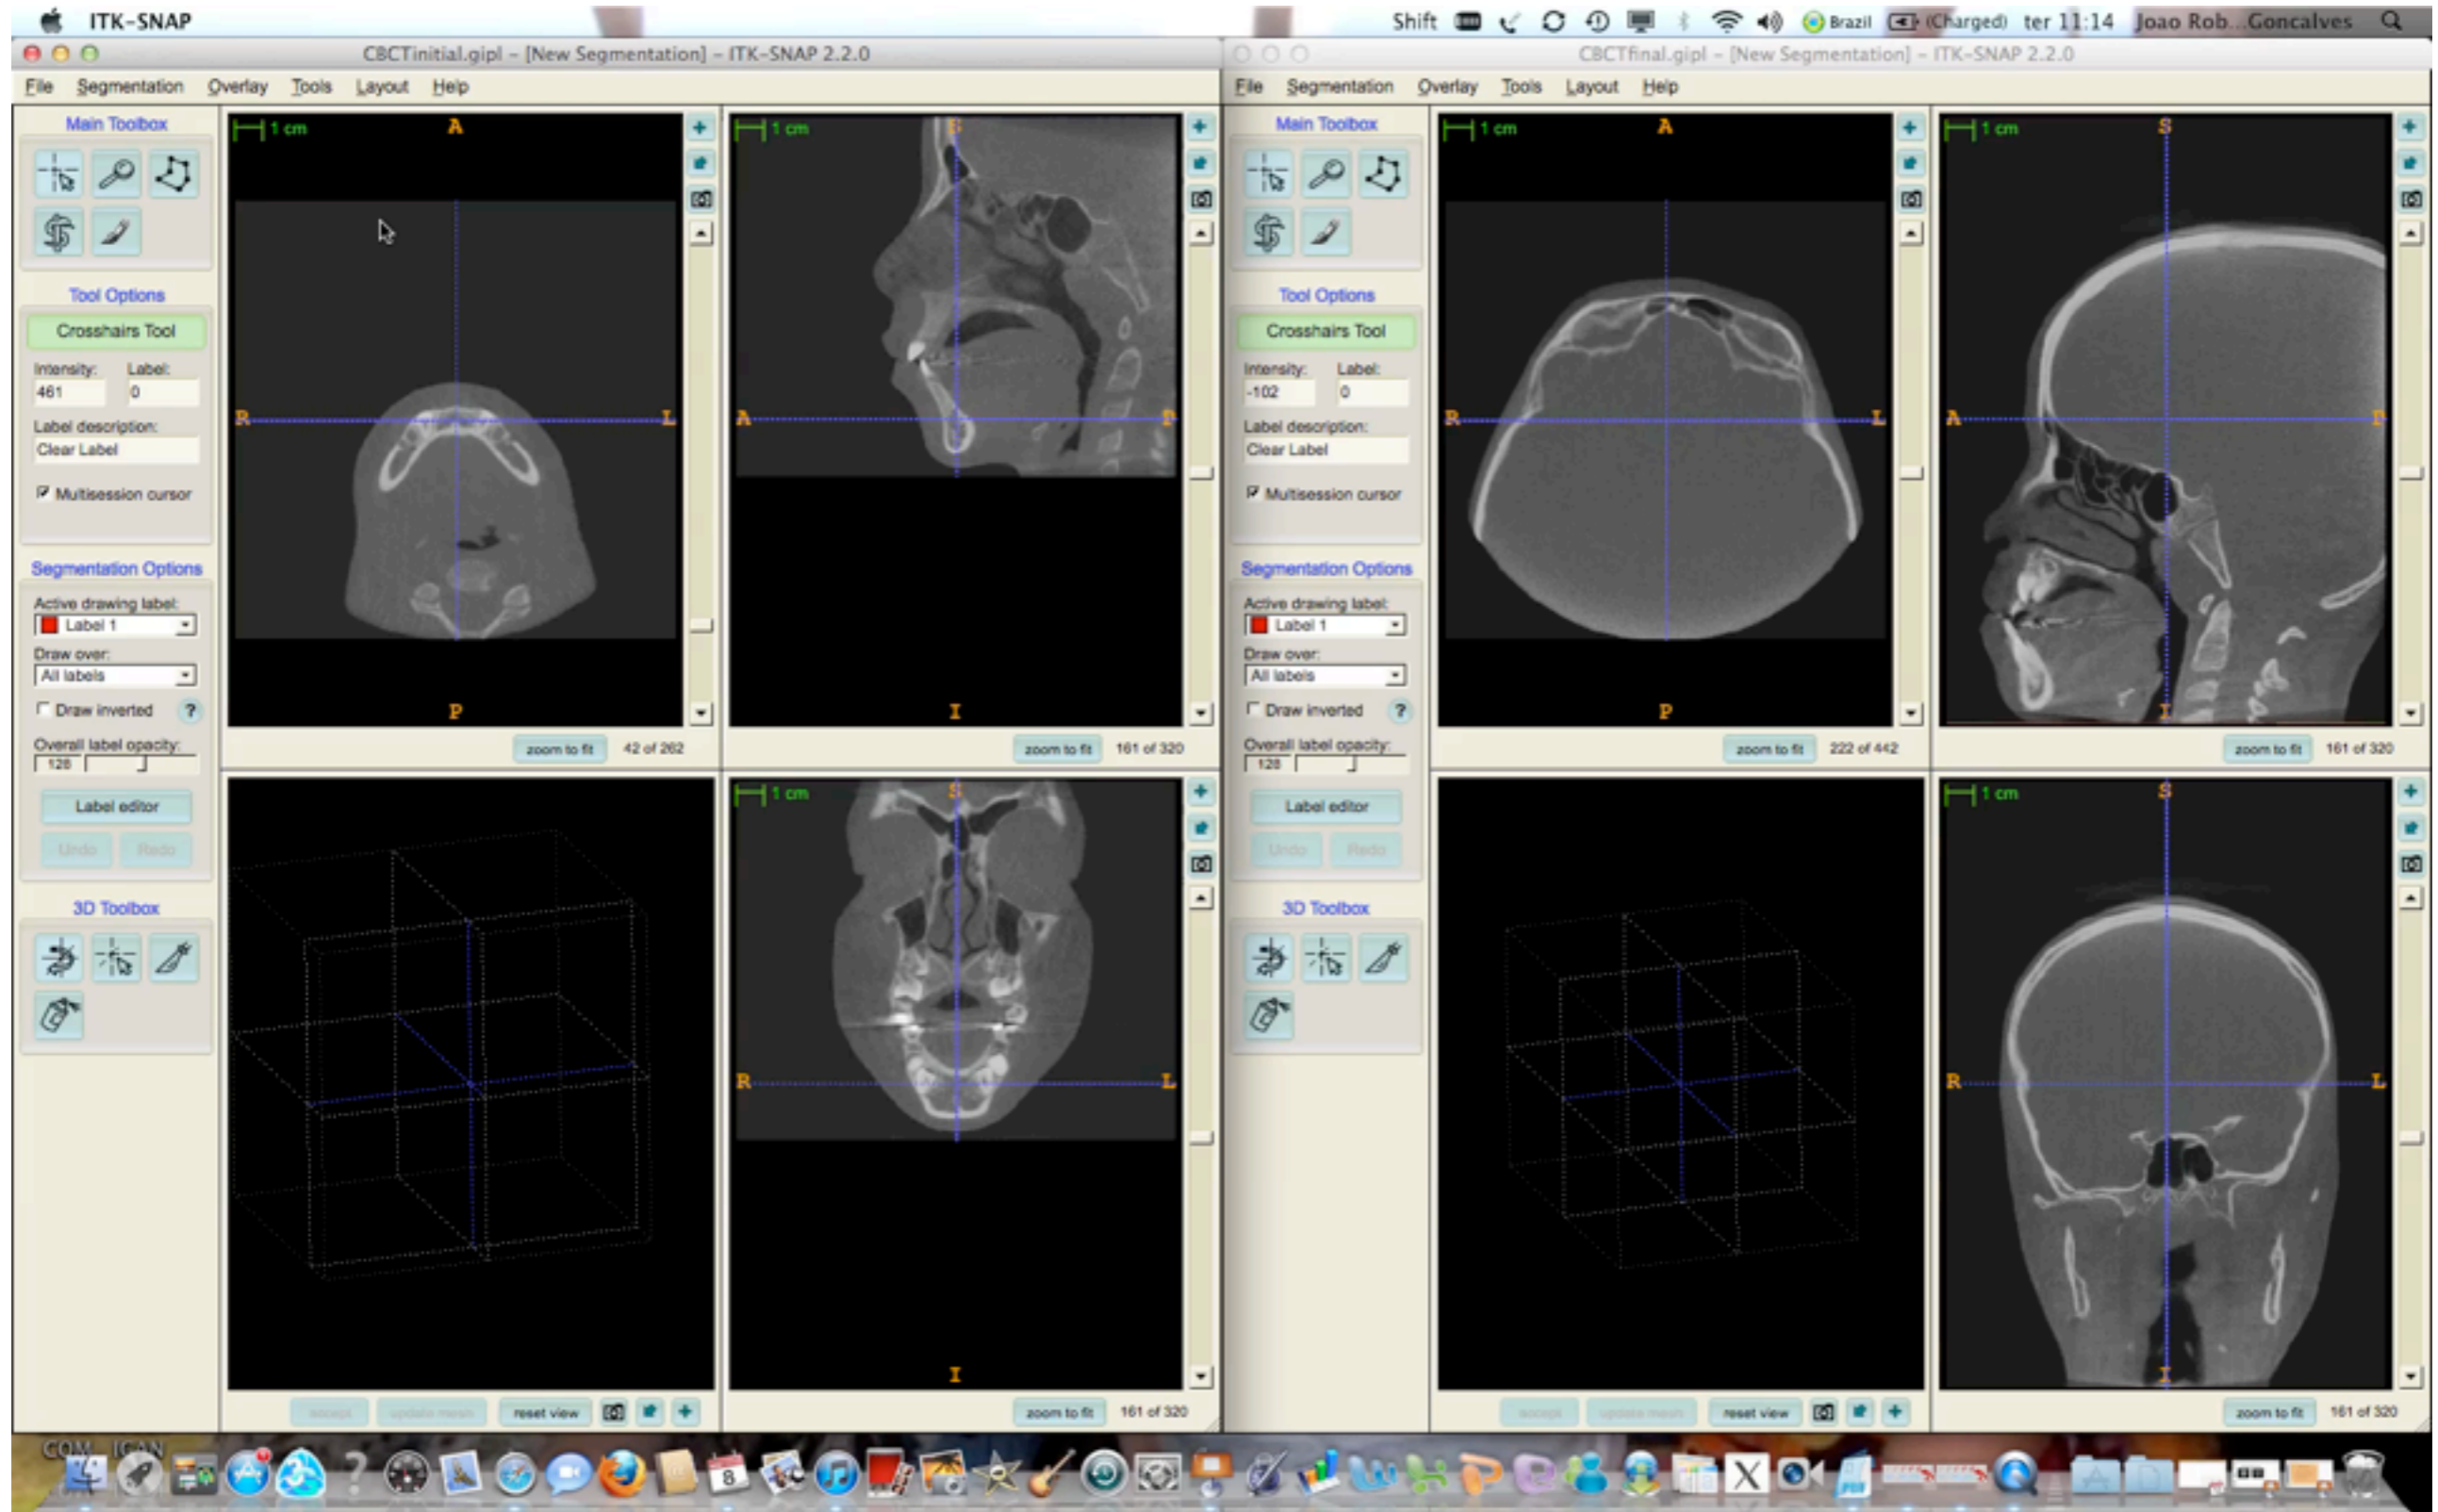

 
Lack of Head Position Control

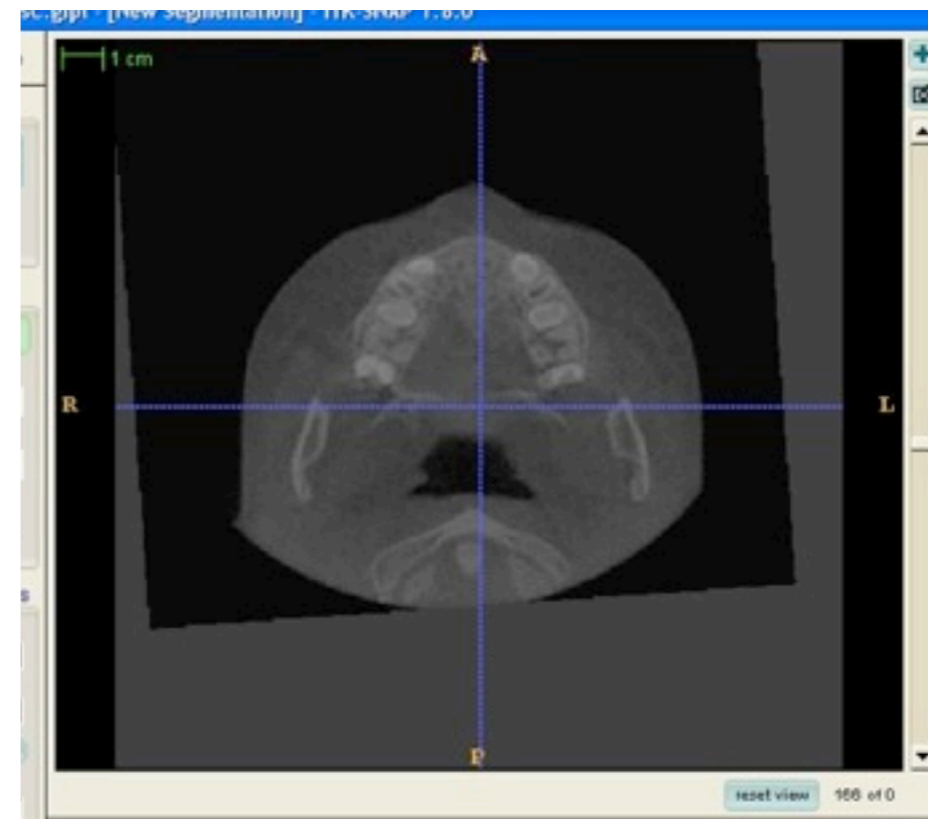


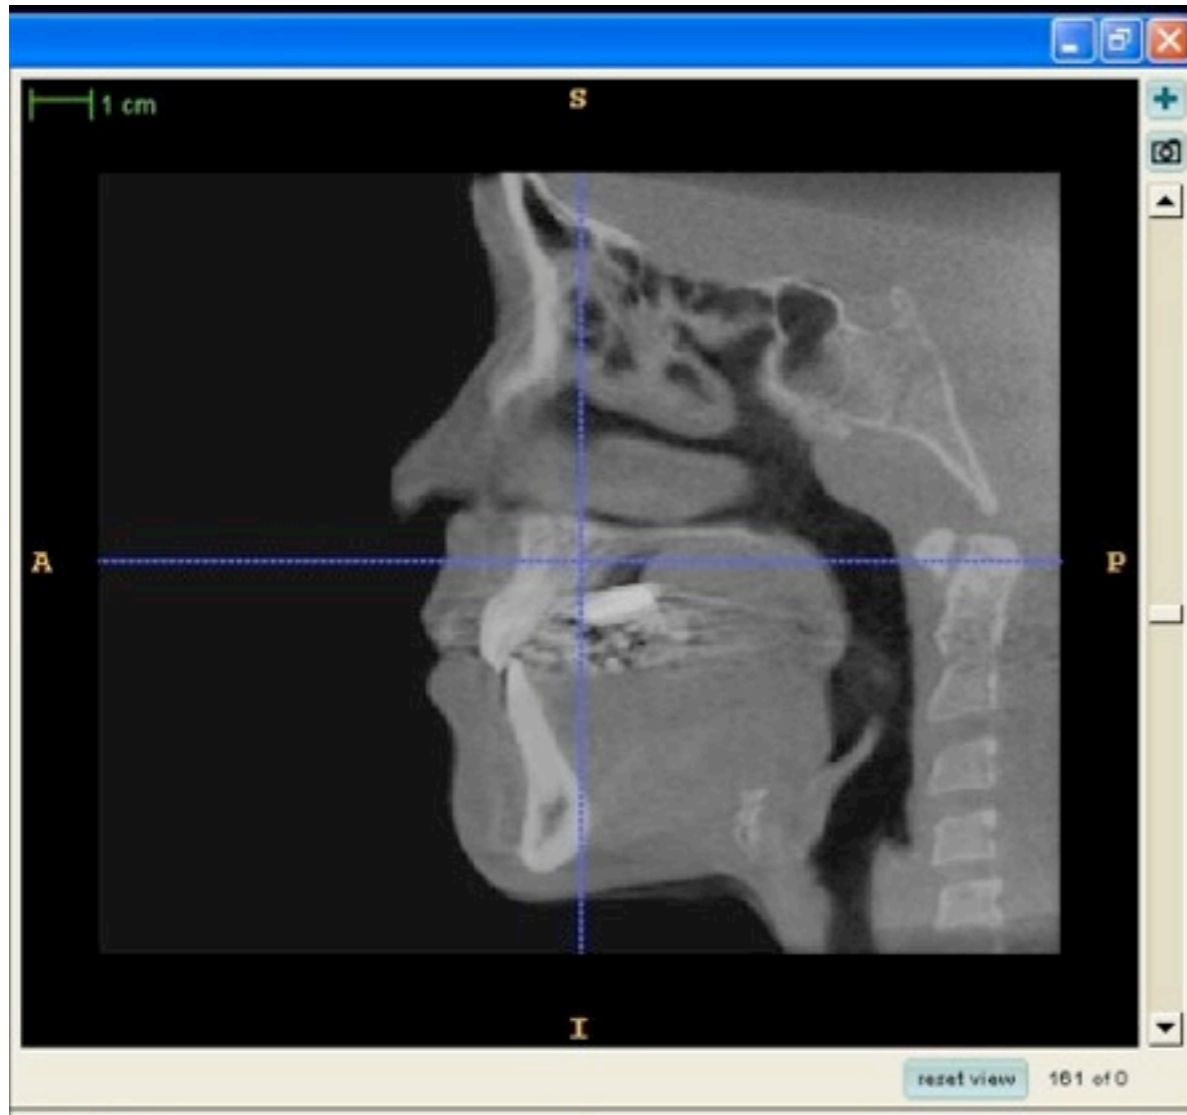


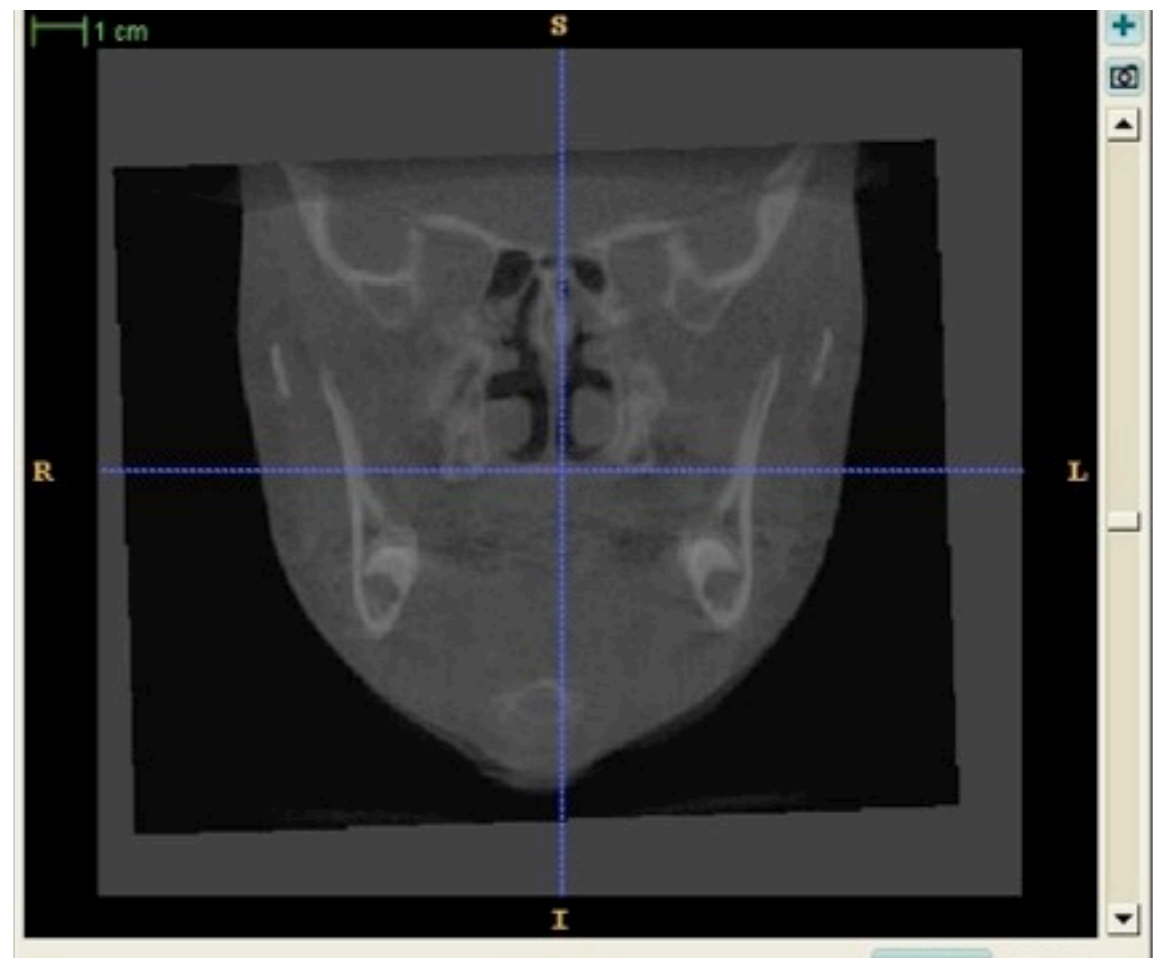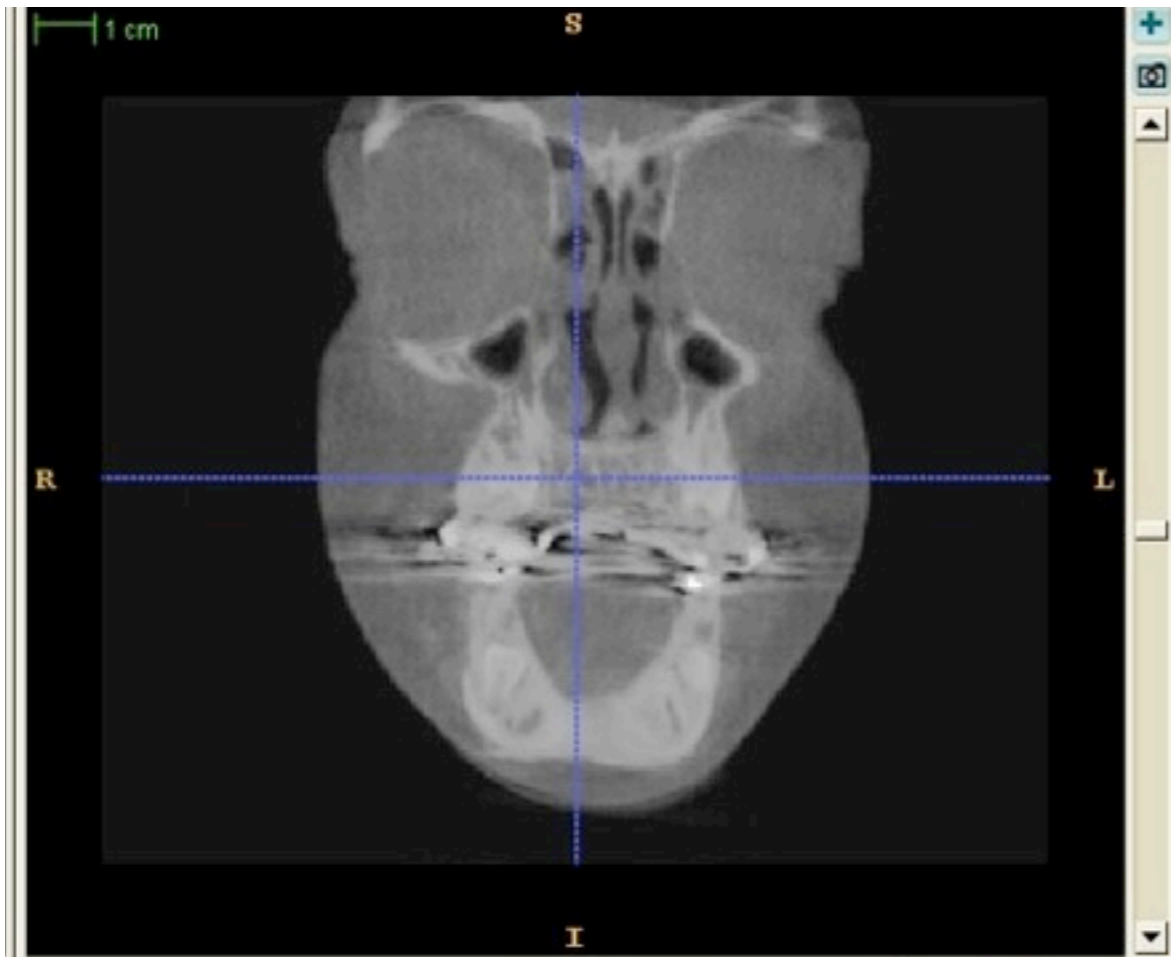



Imagine Downsample and Registration

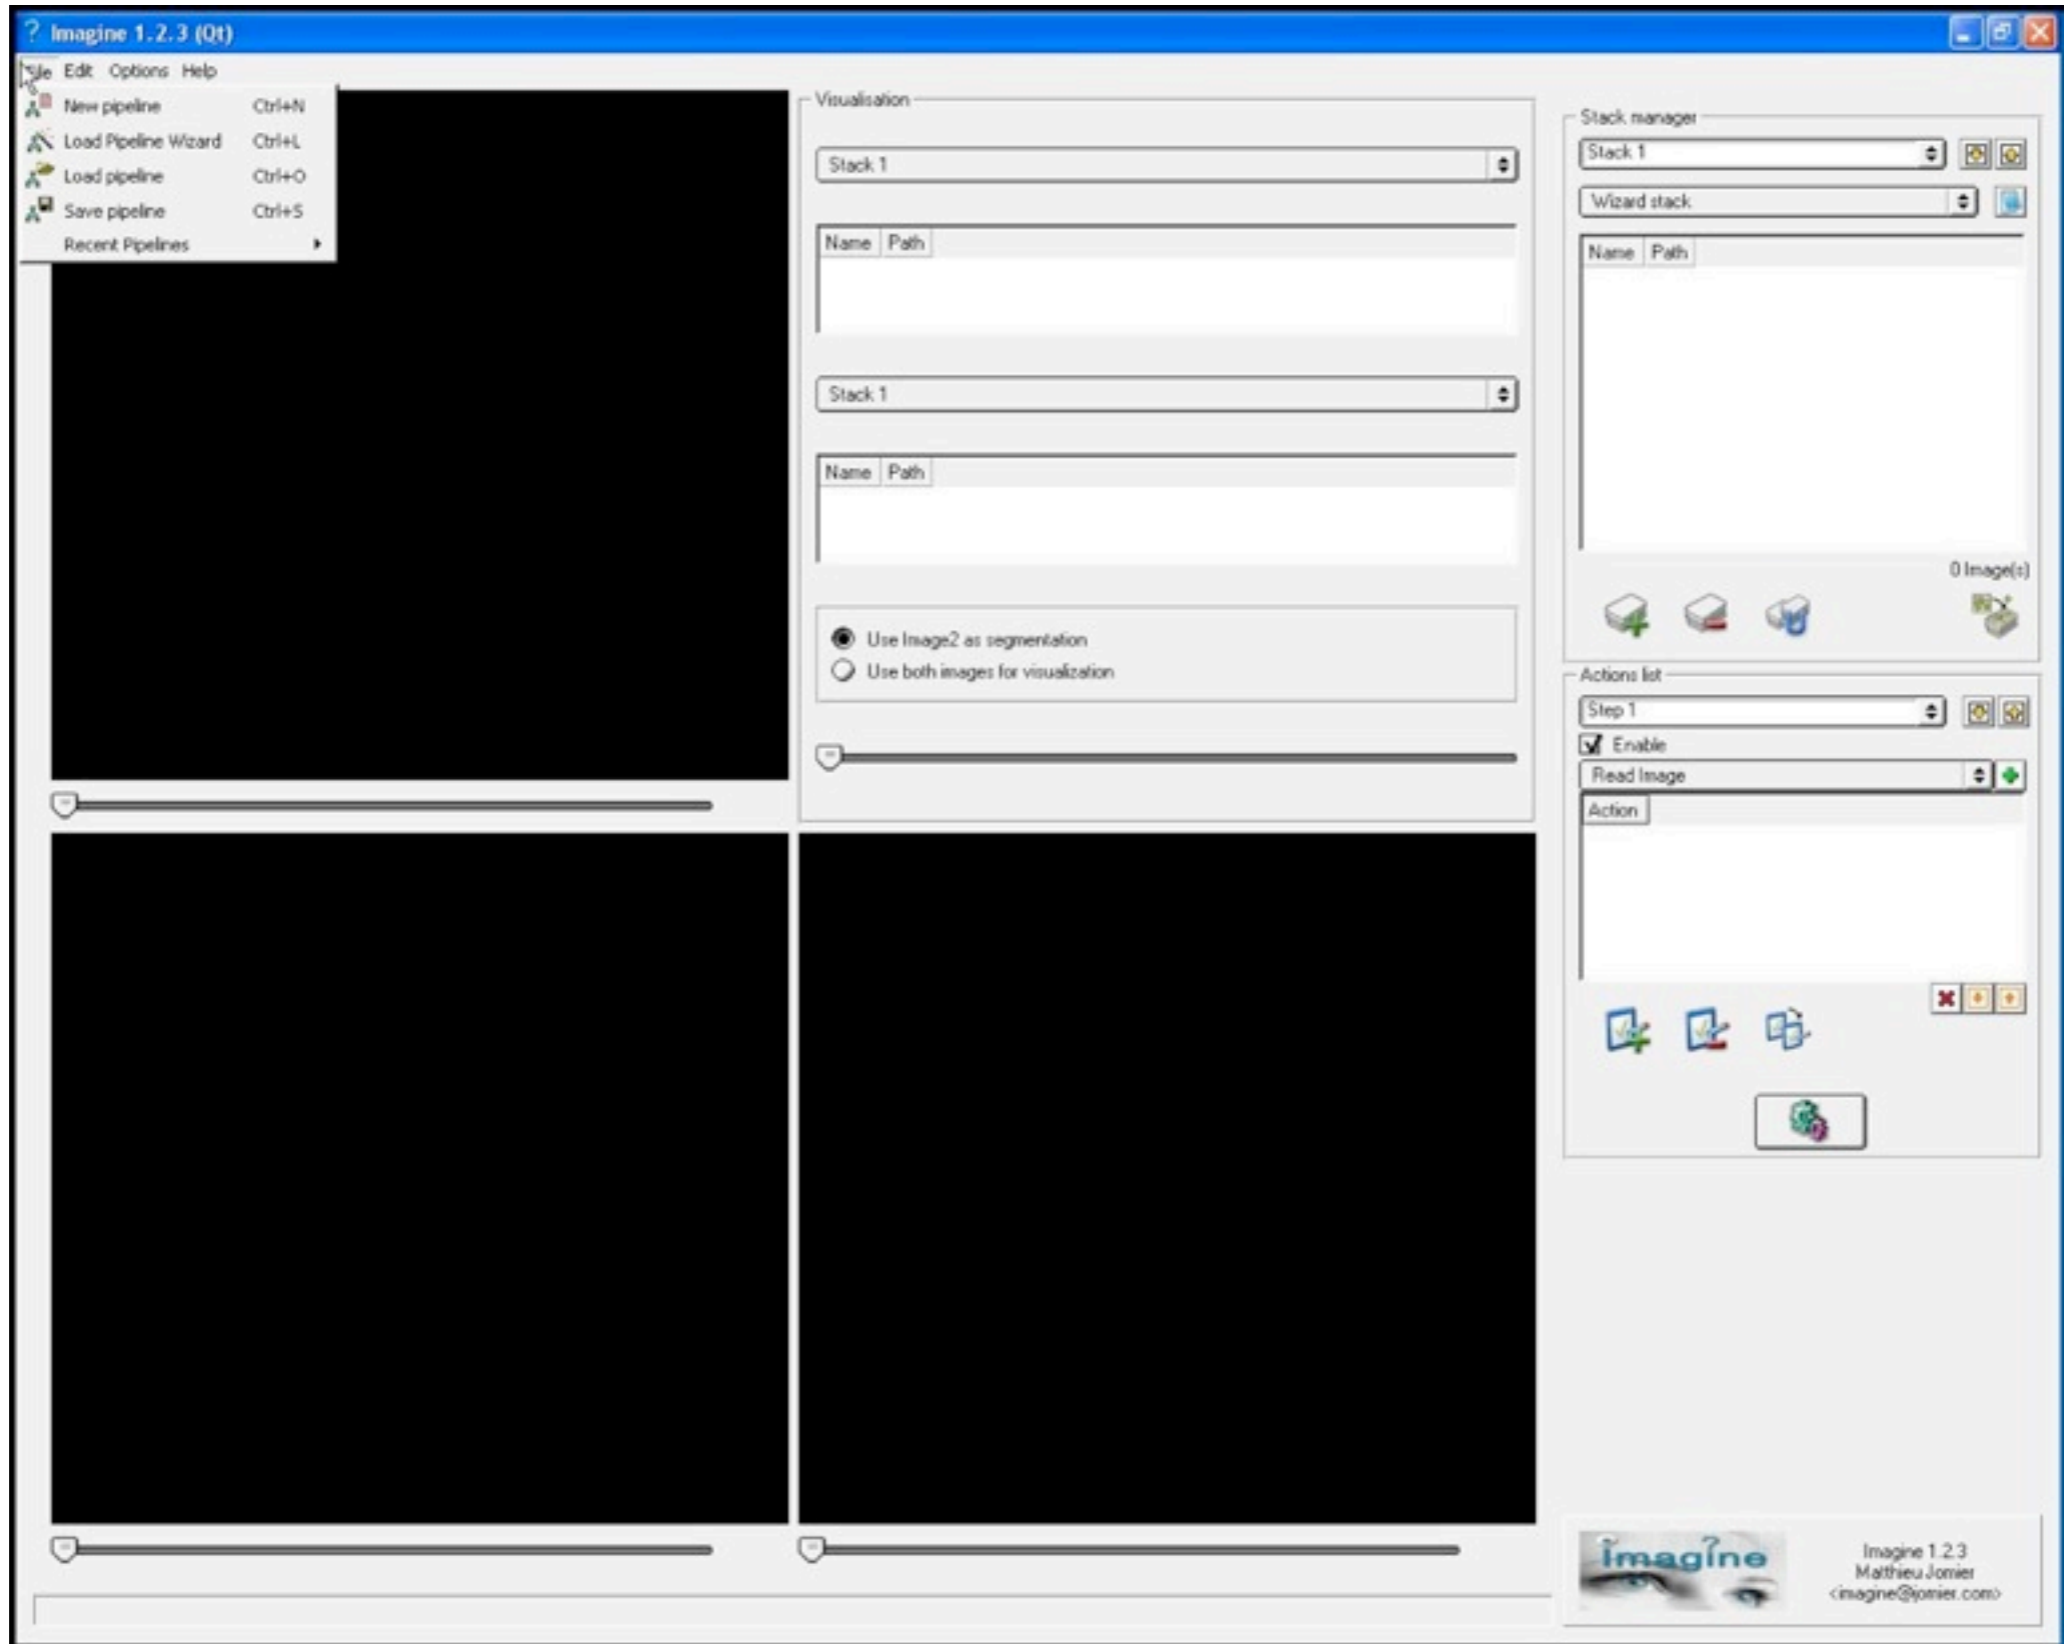 


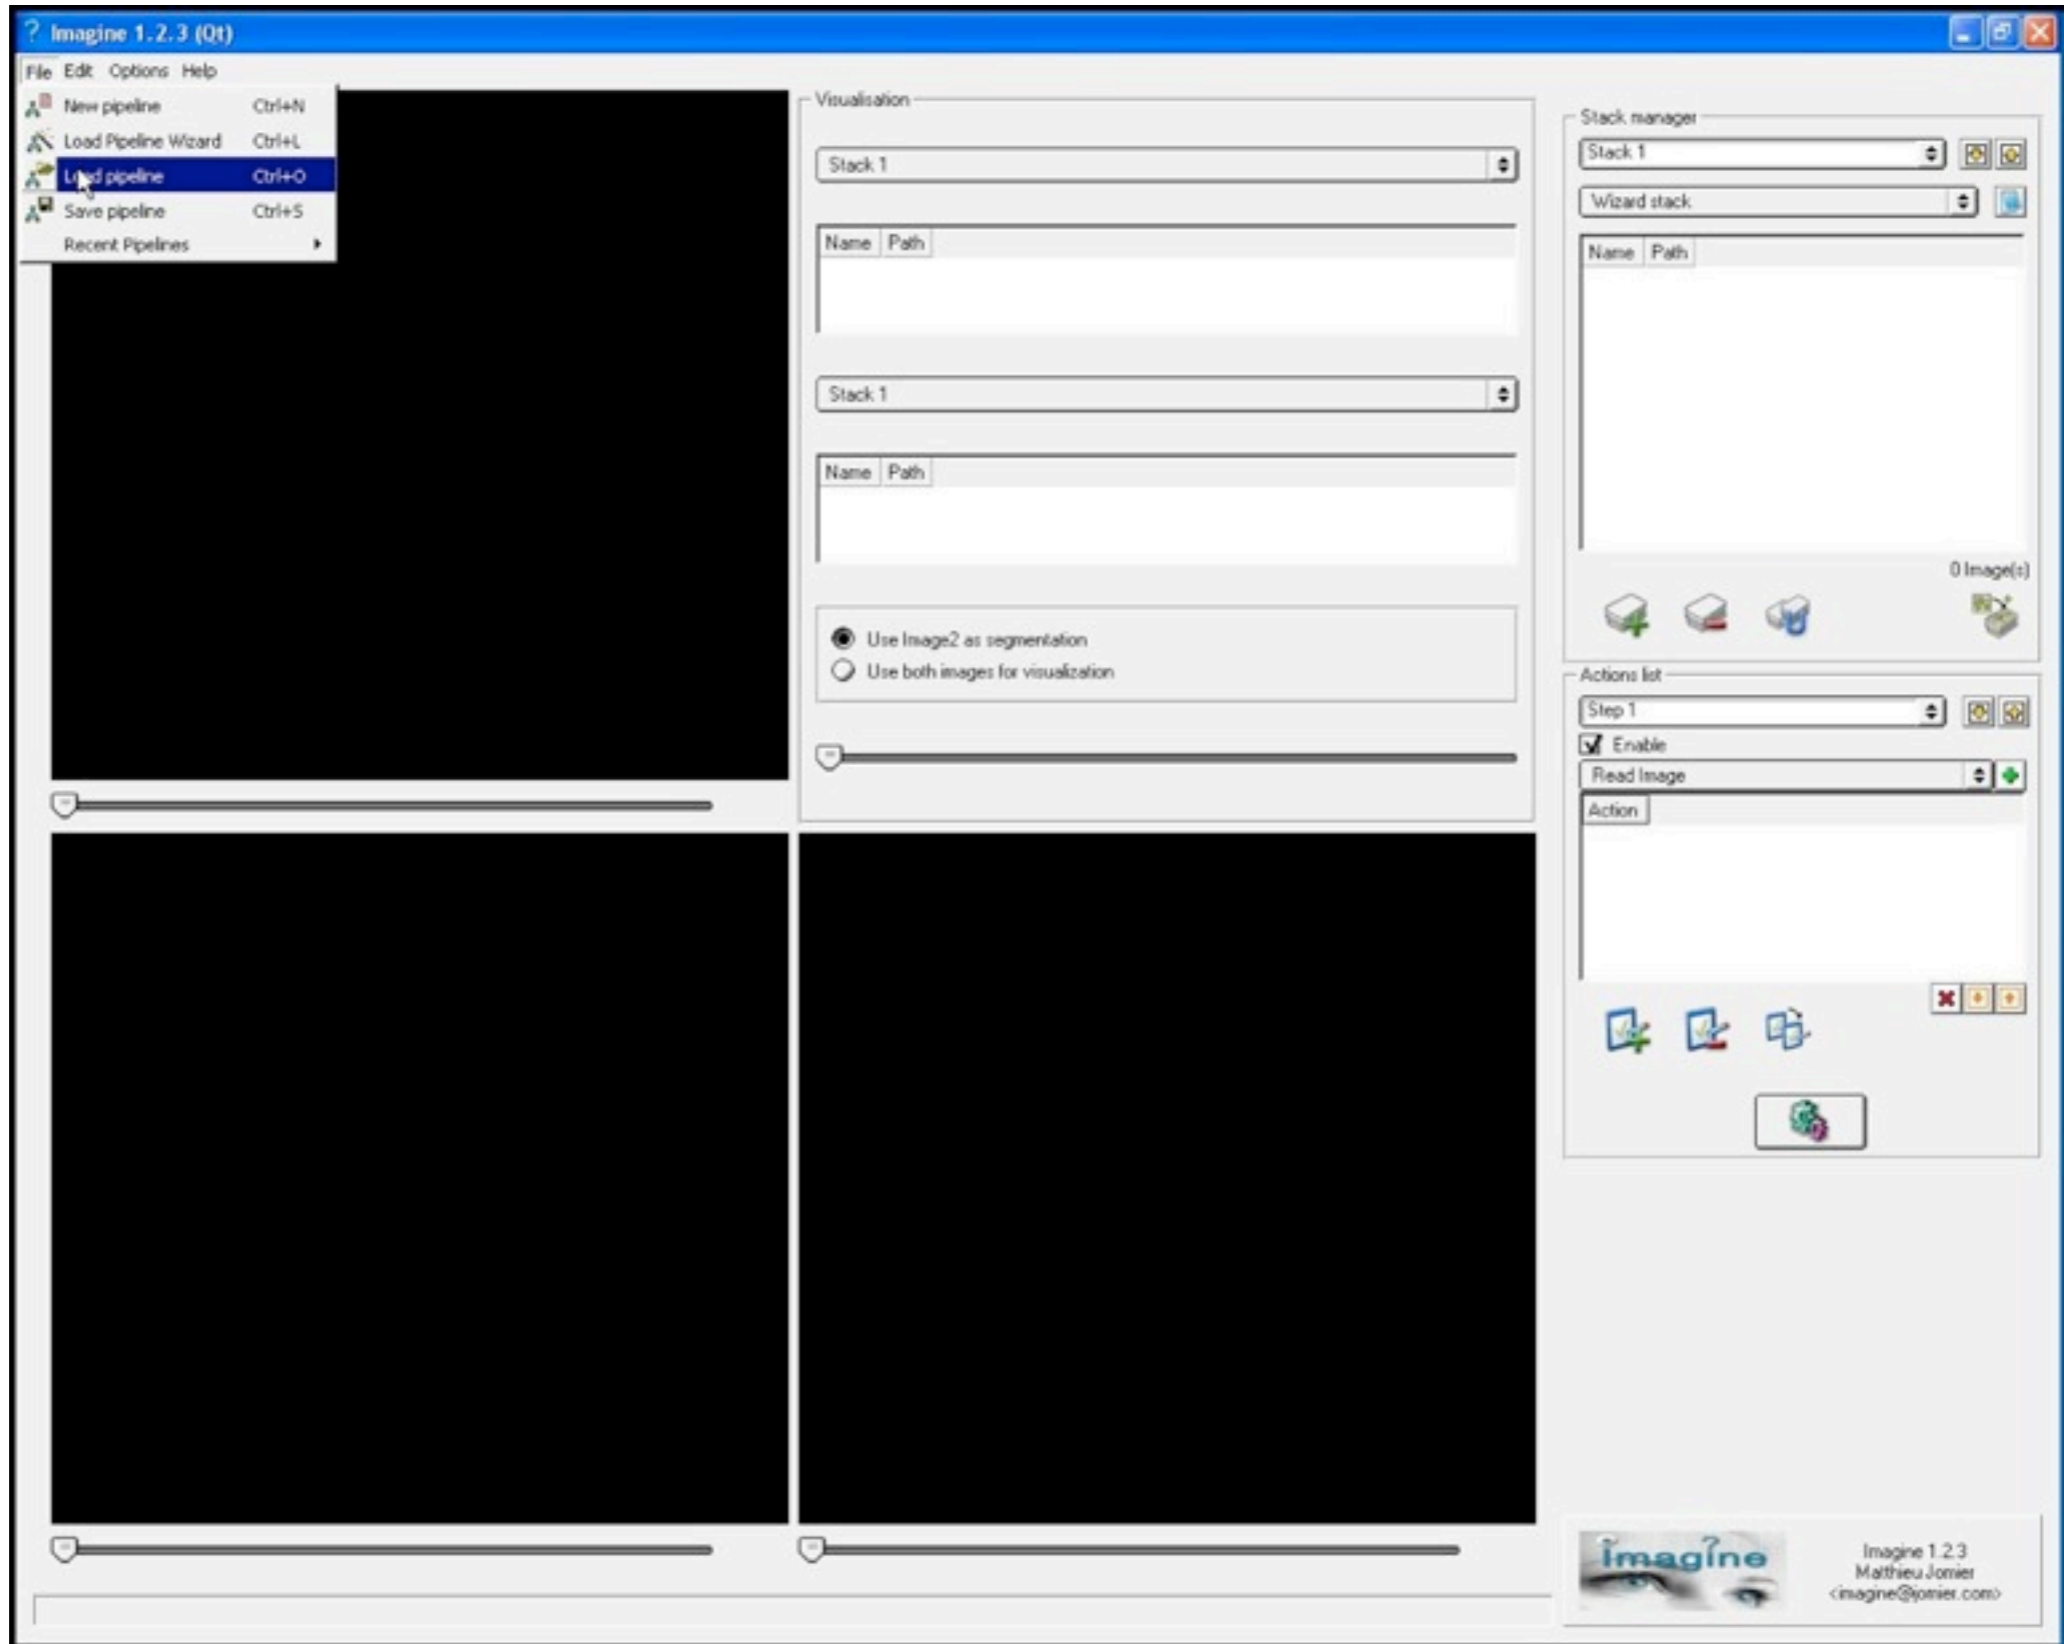


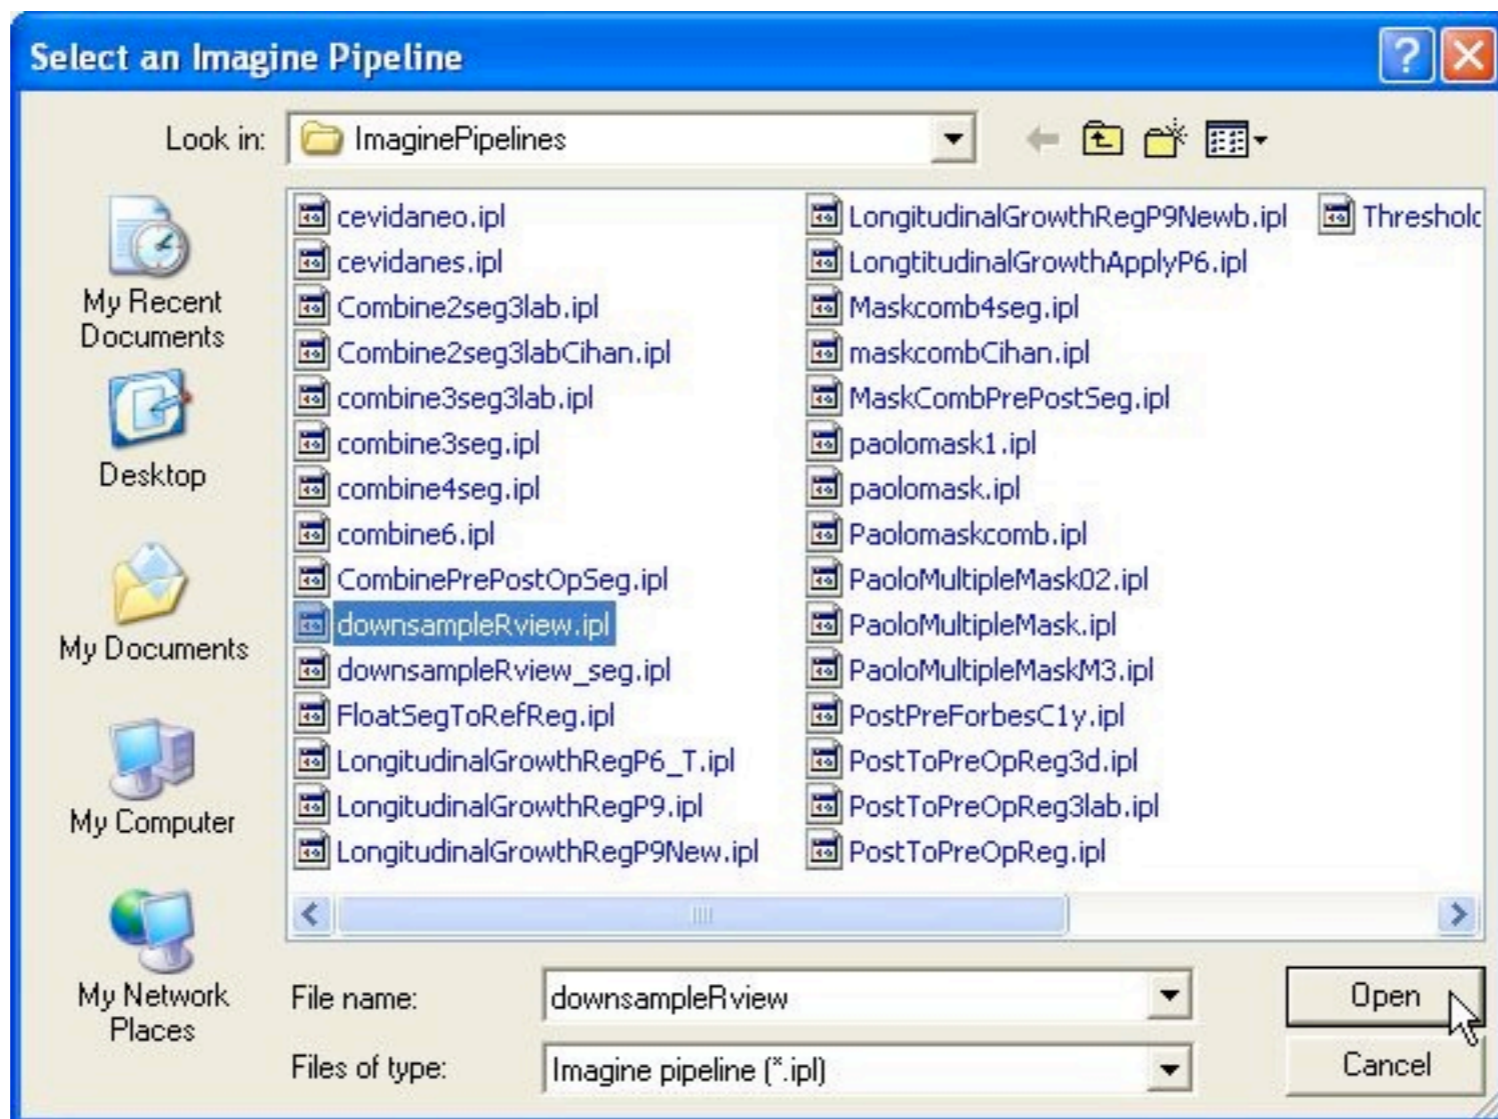 


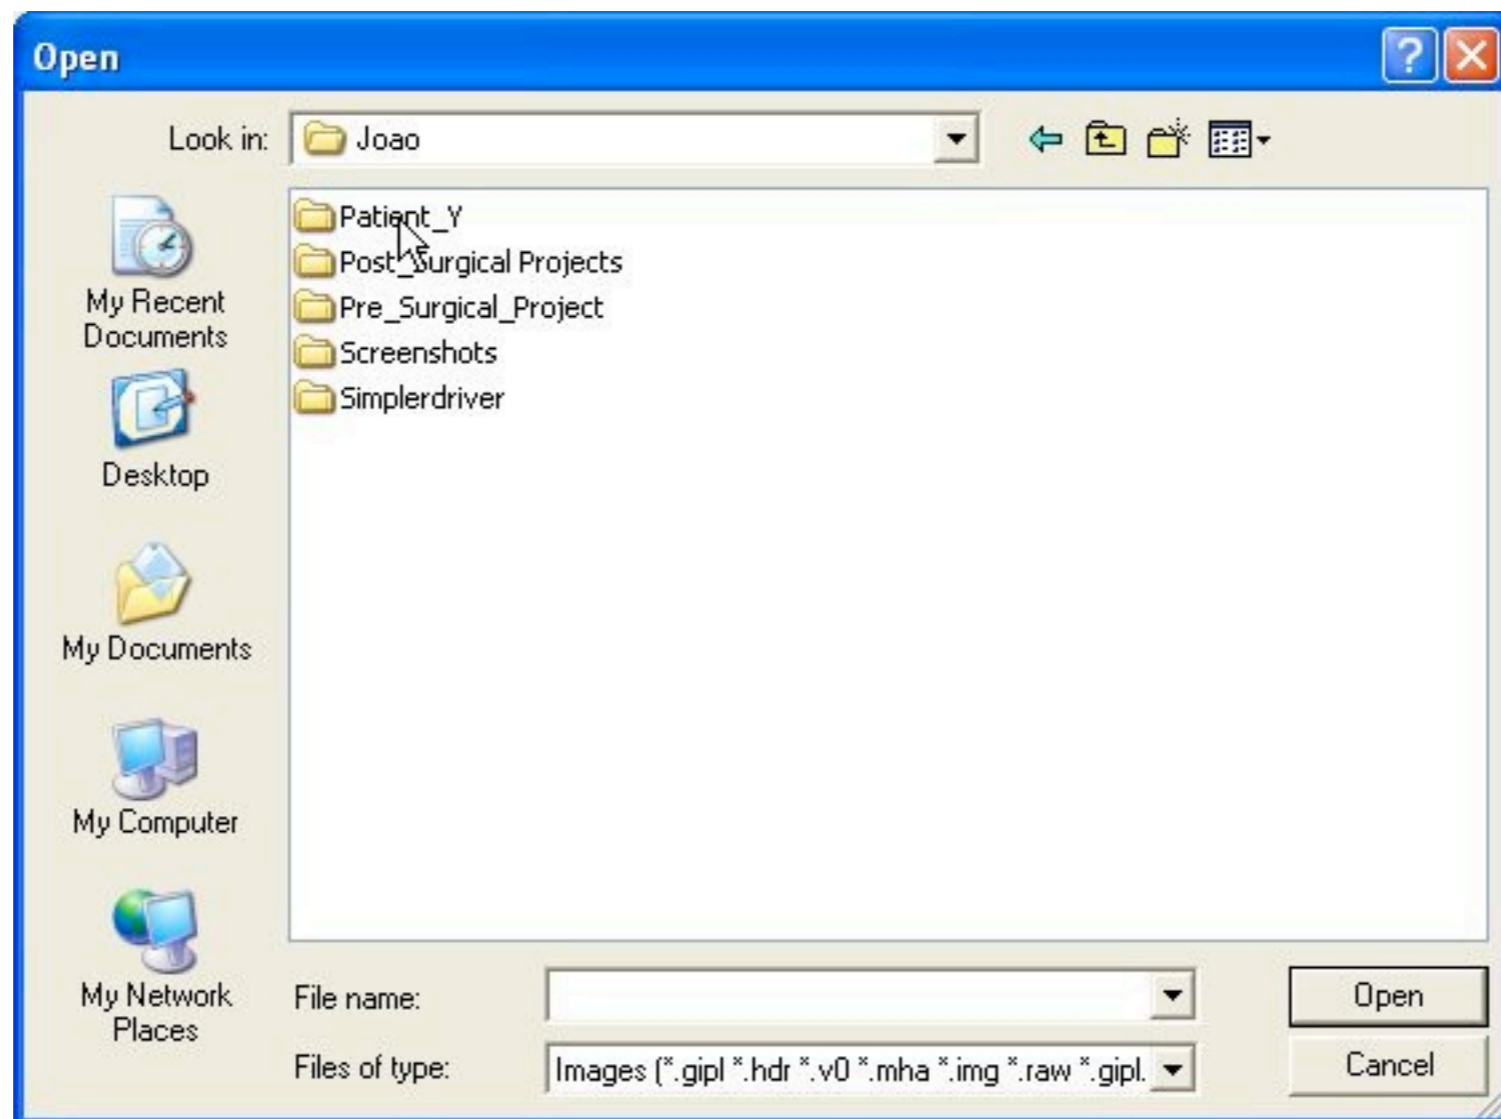


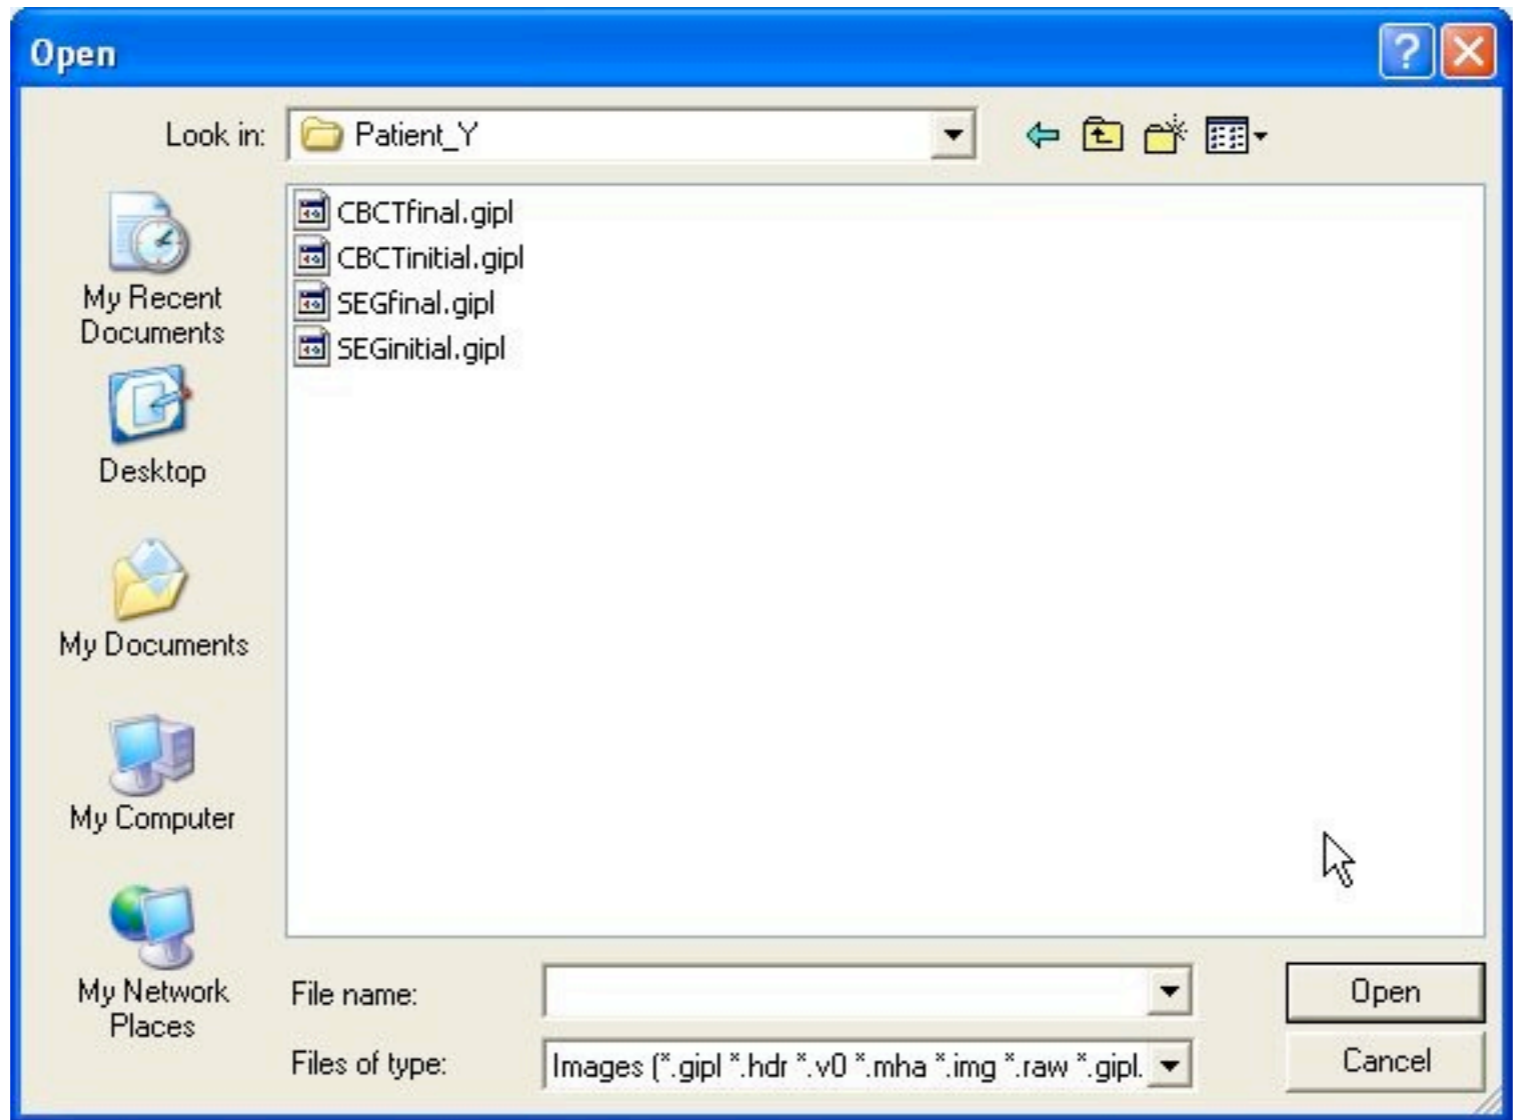    


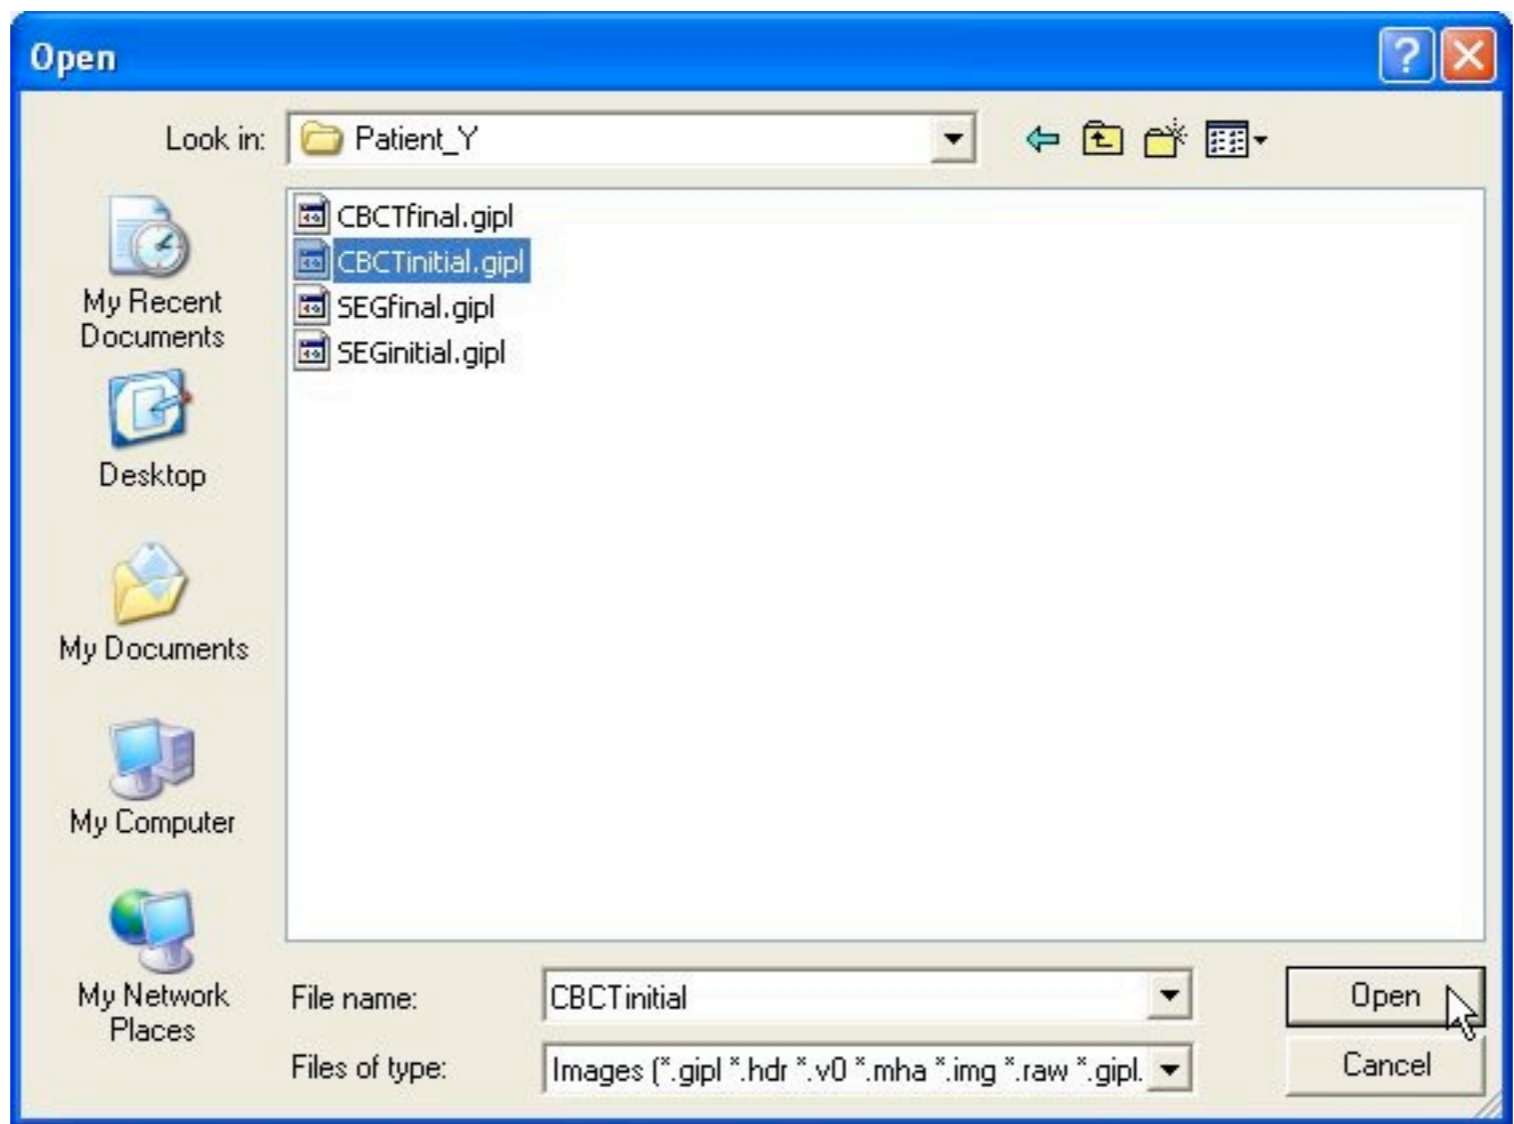


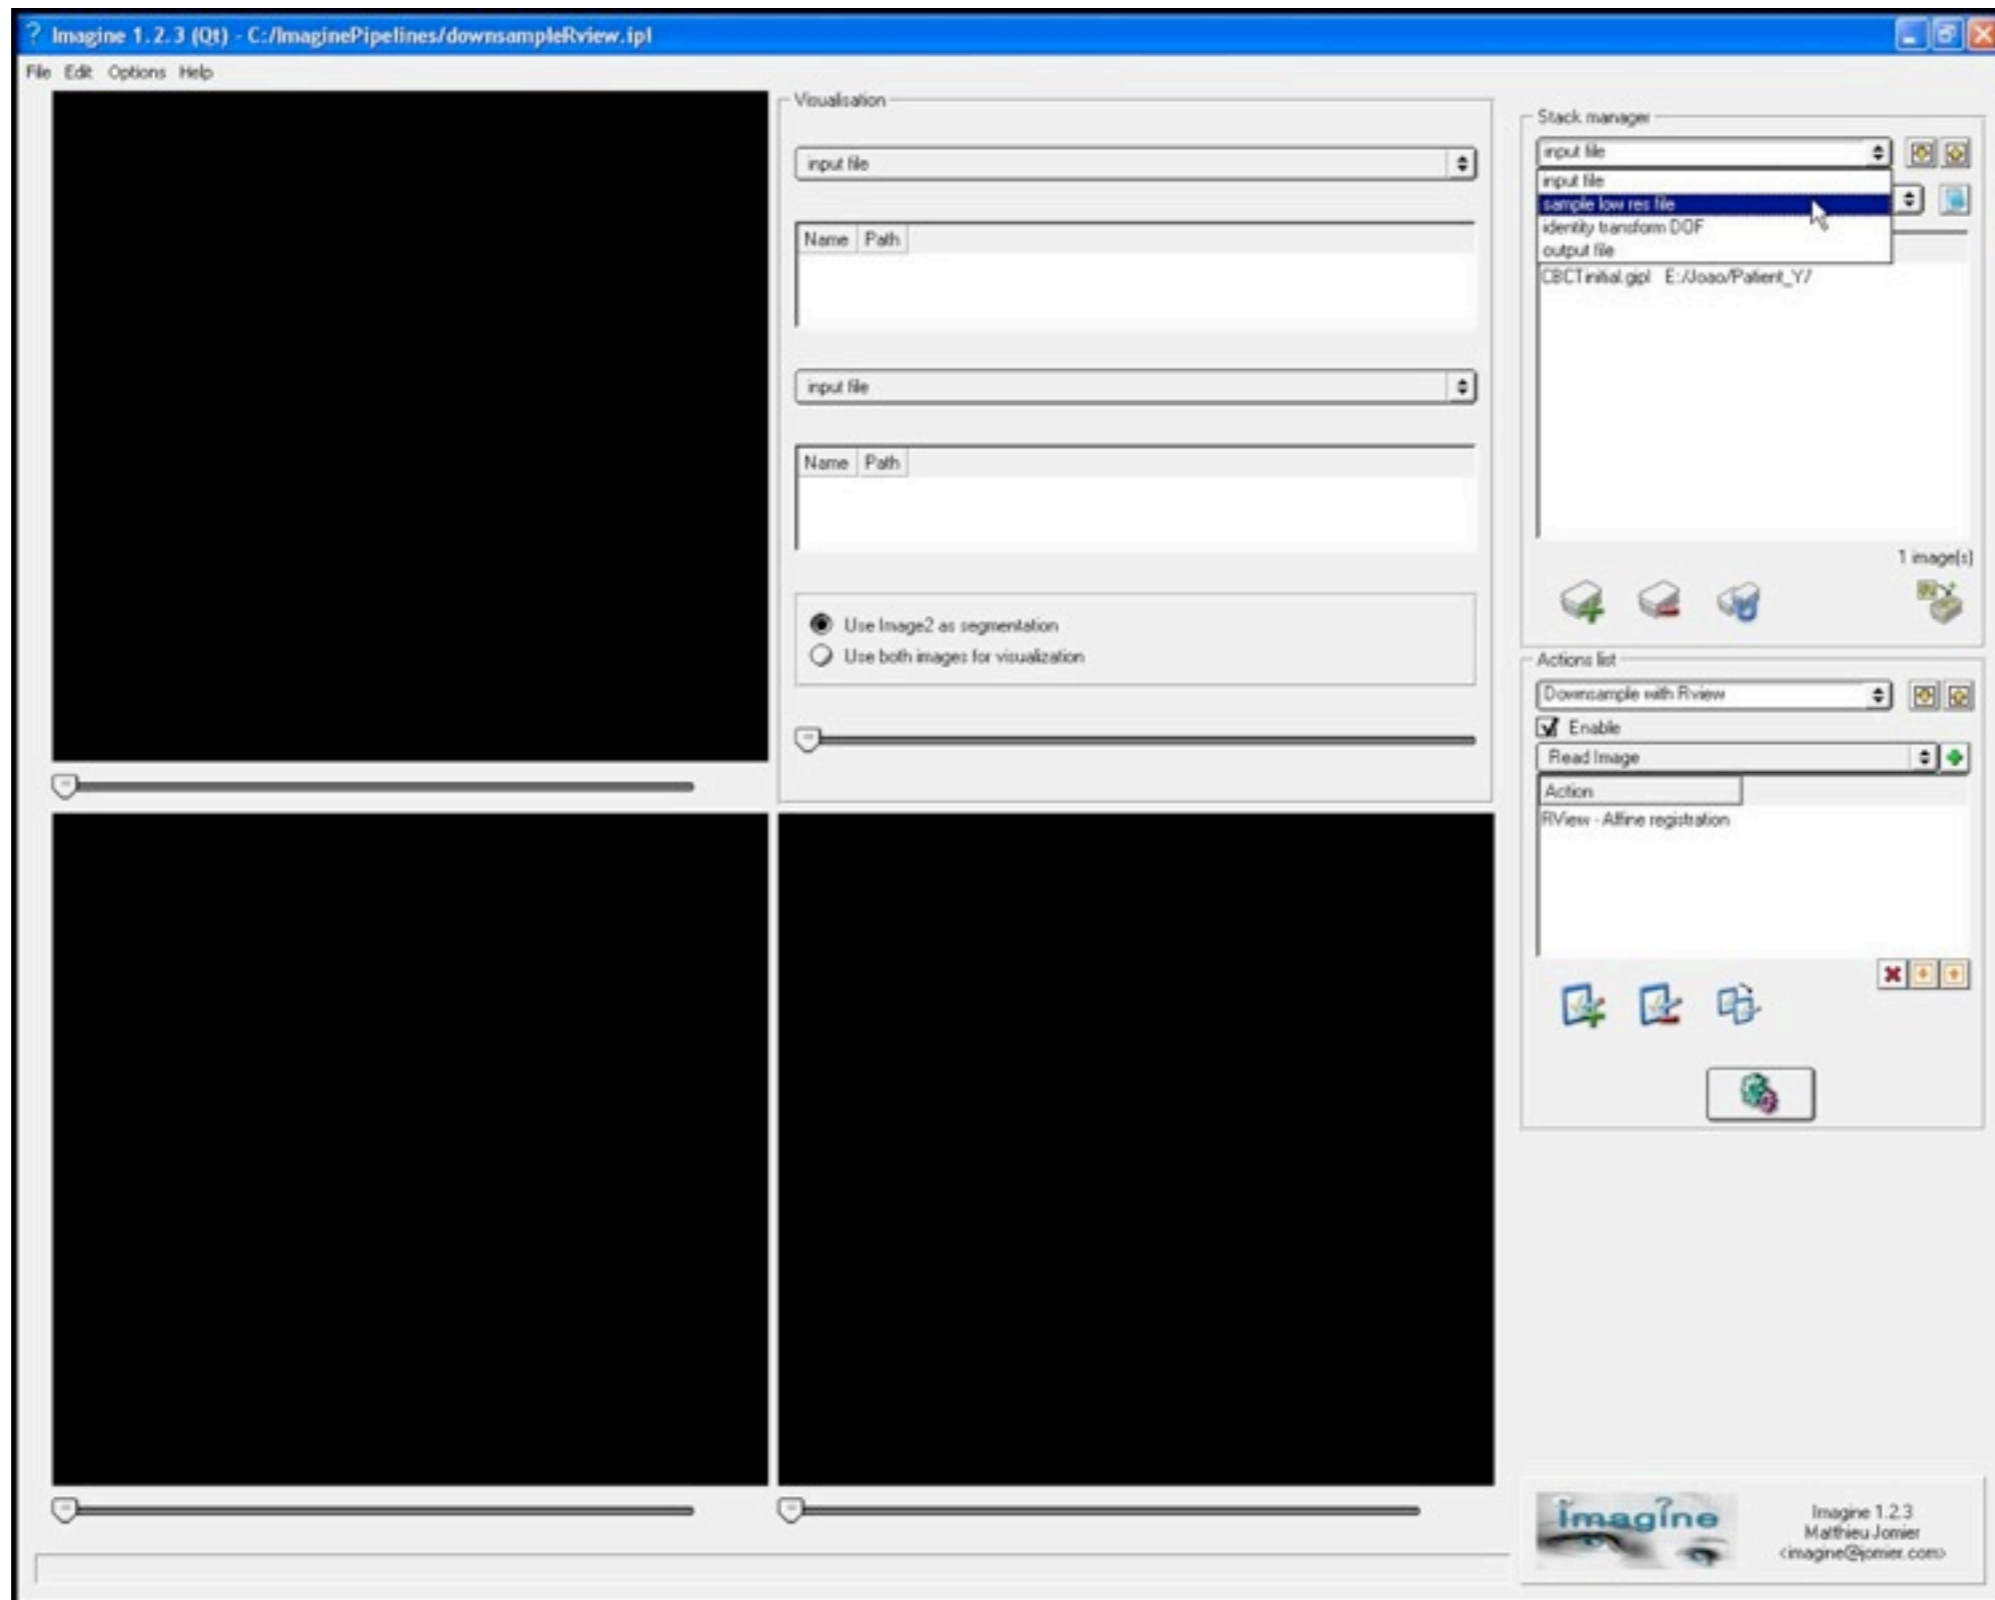 


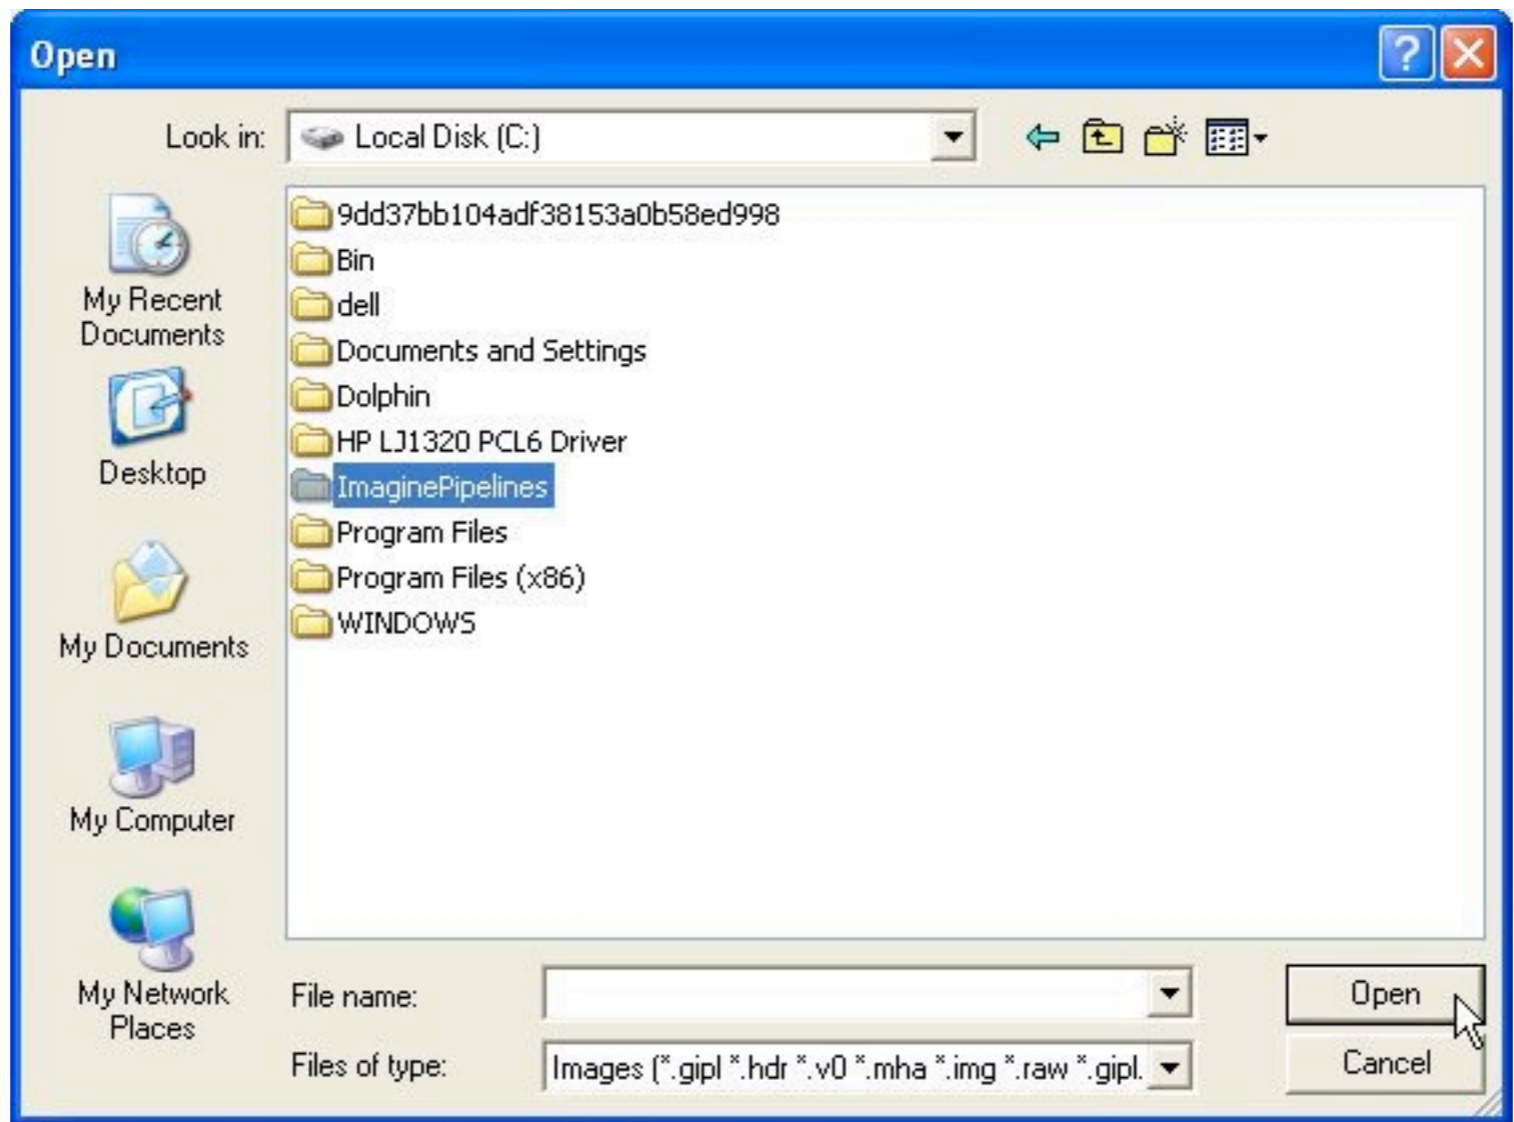

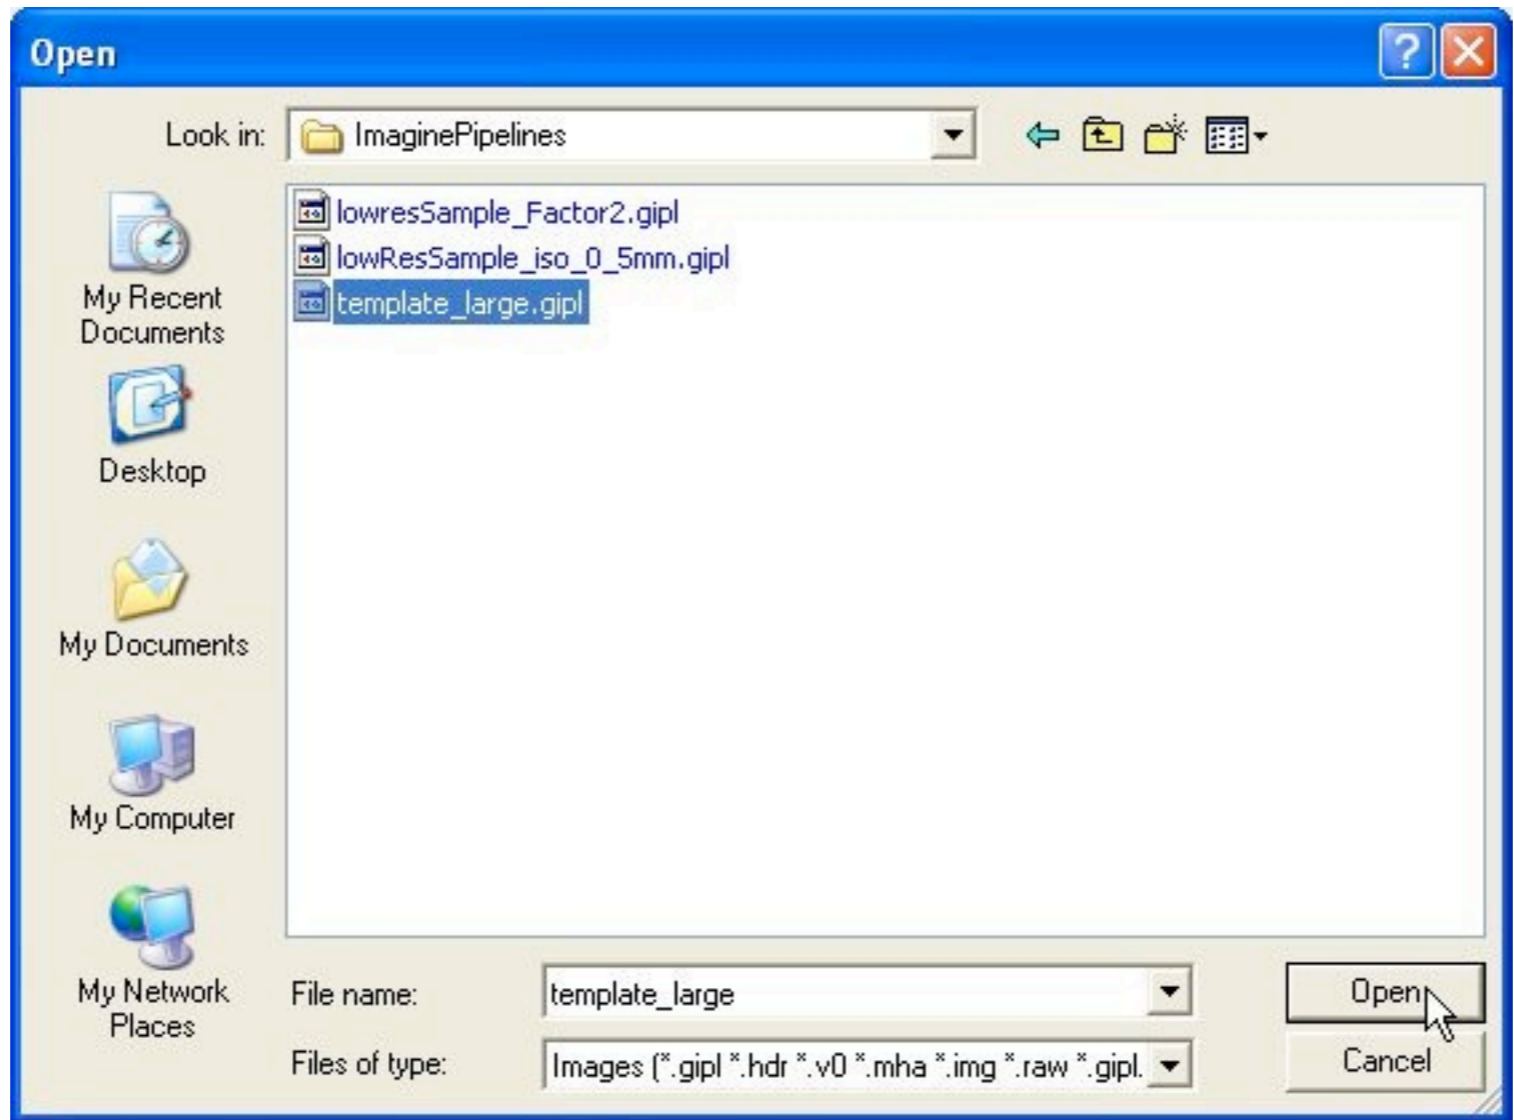

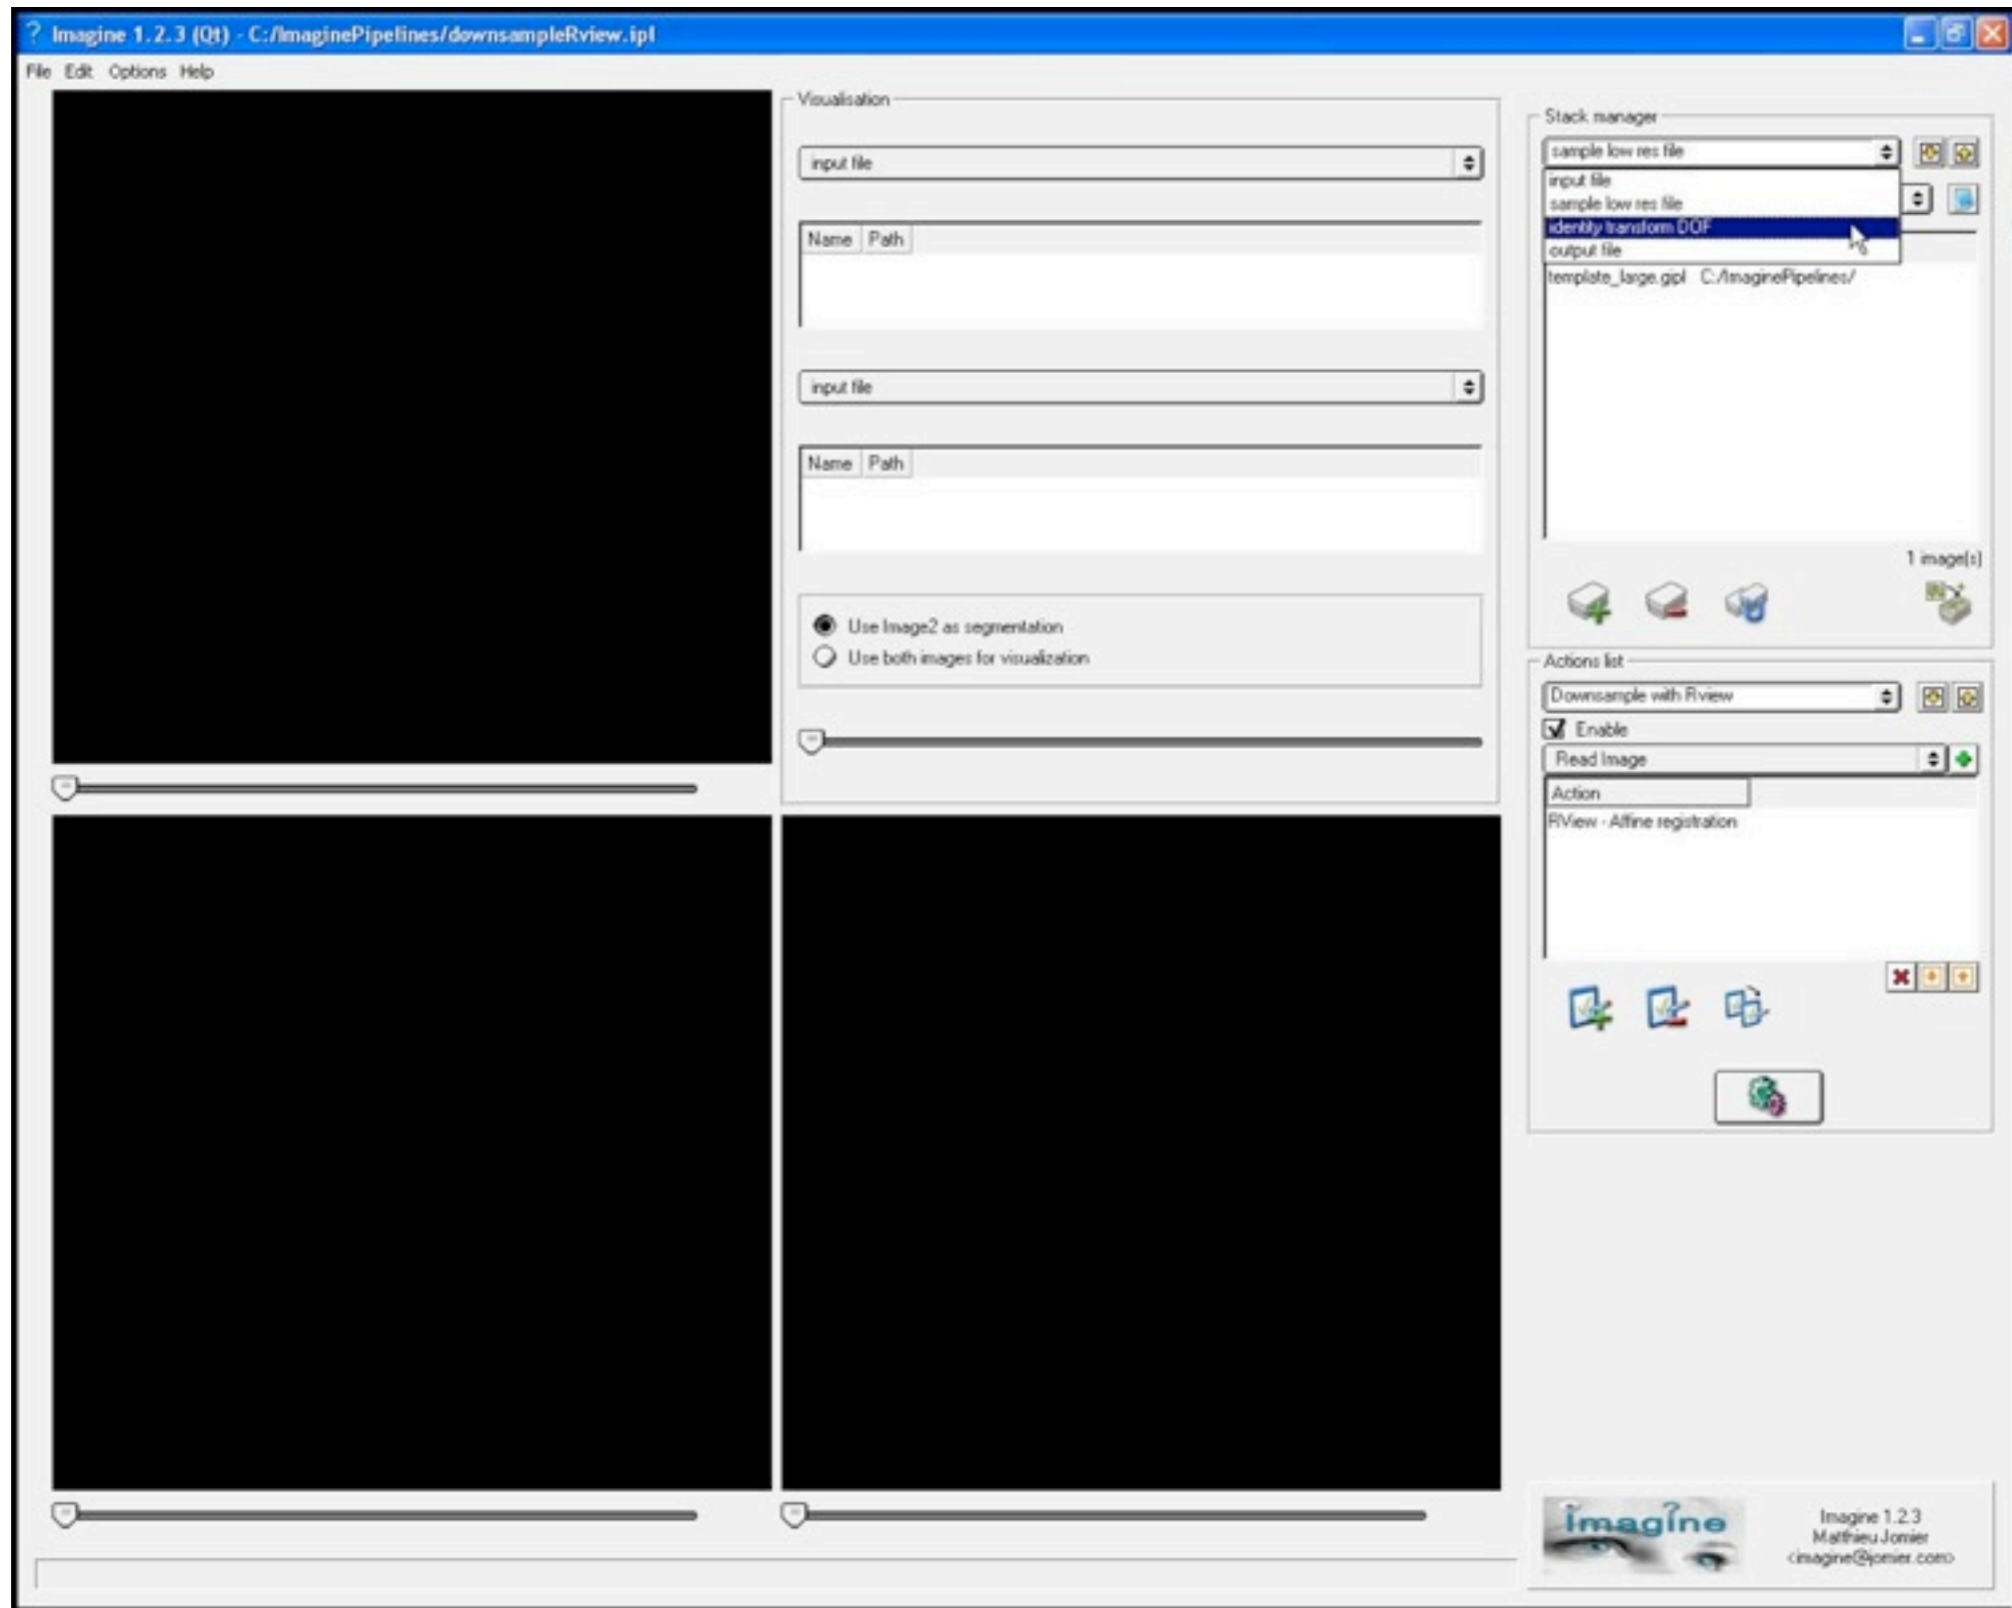

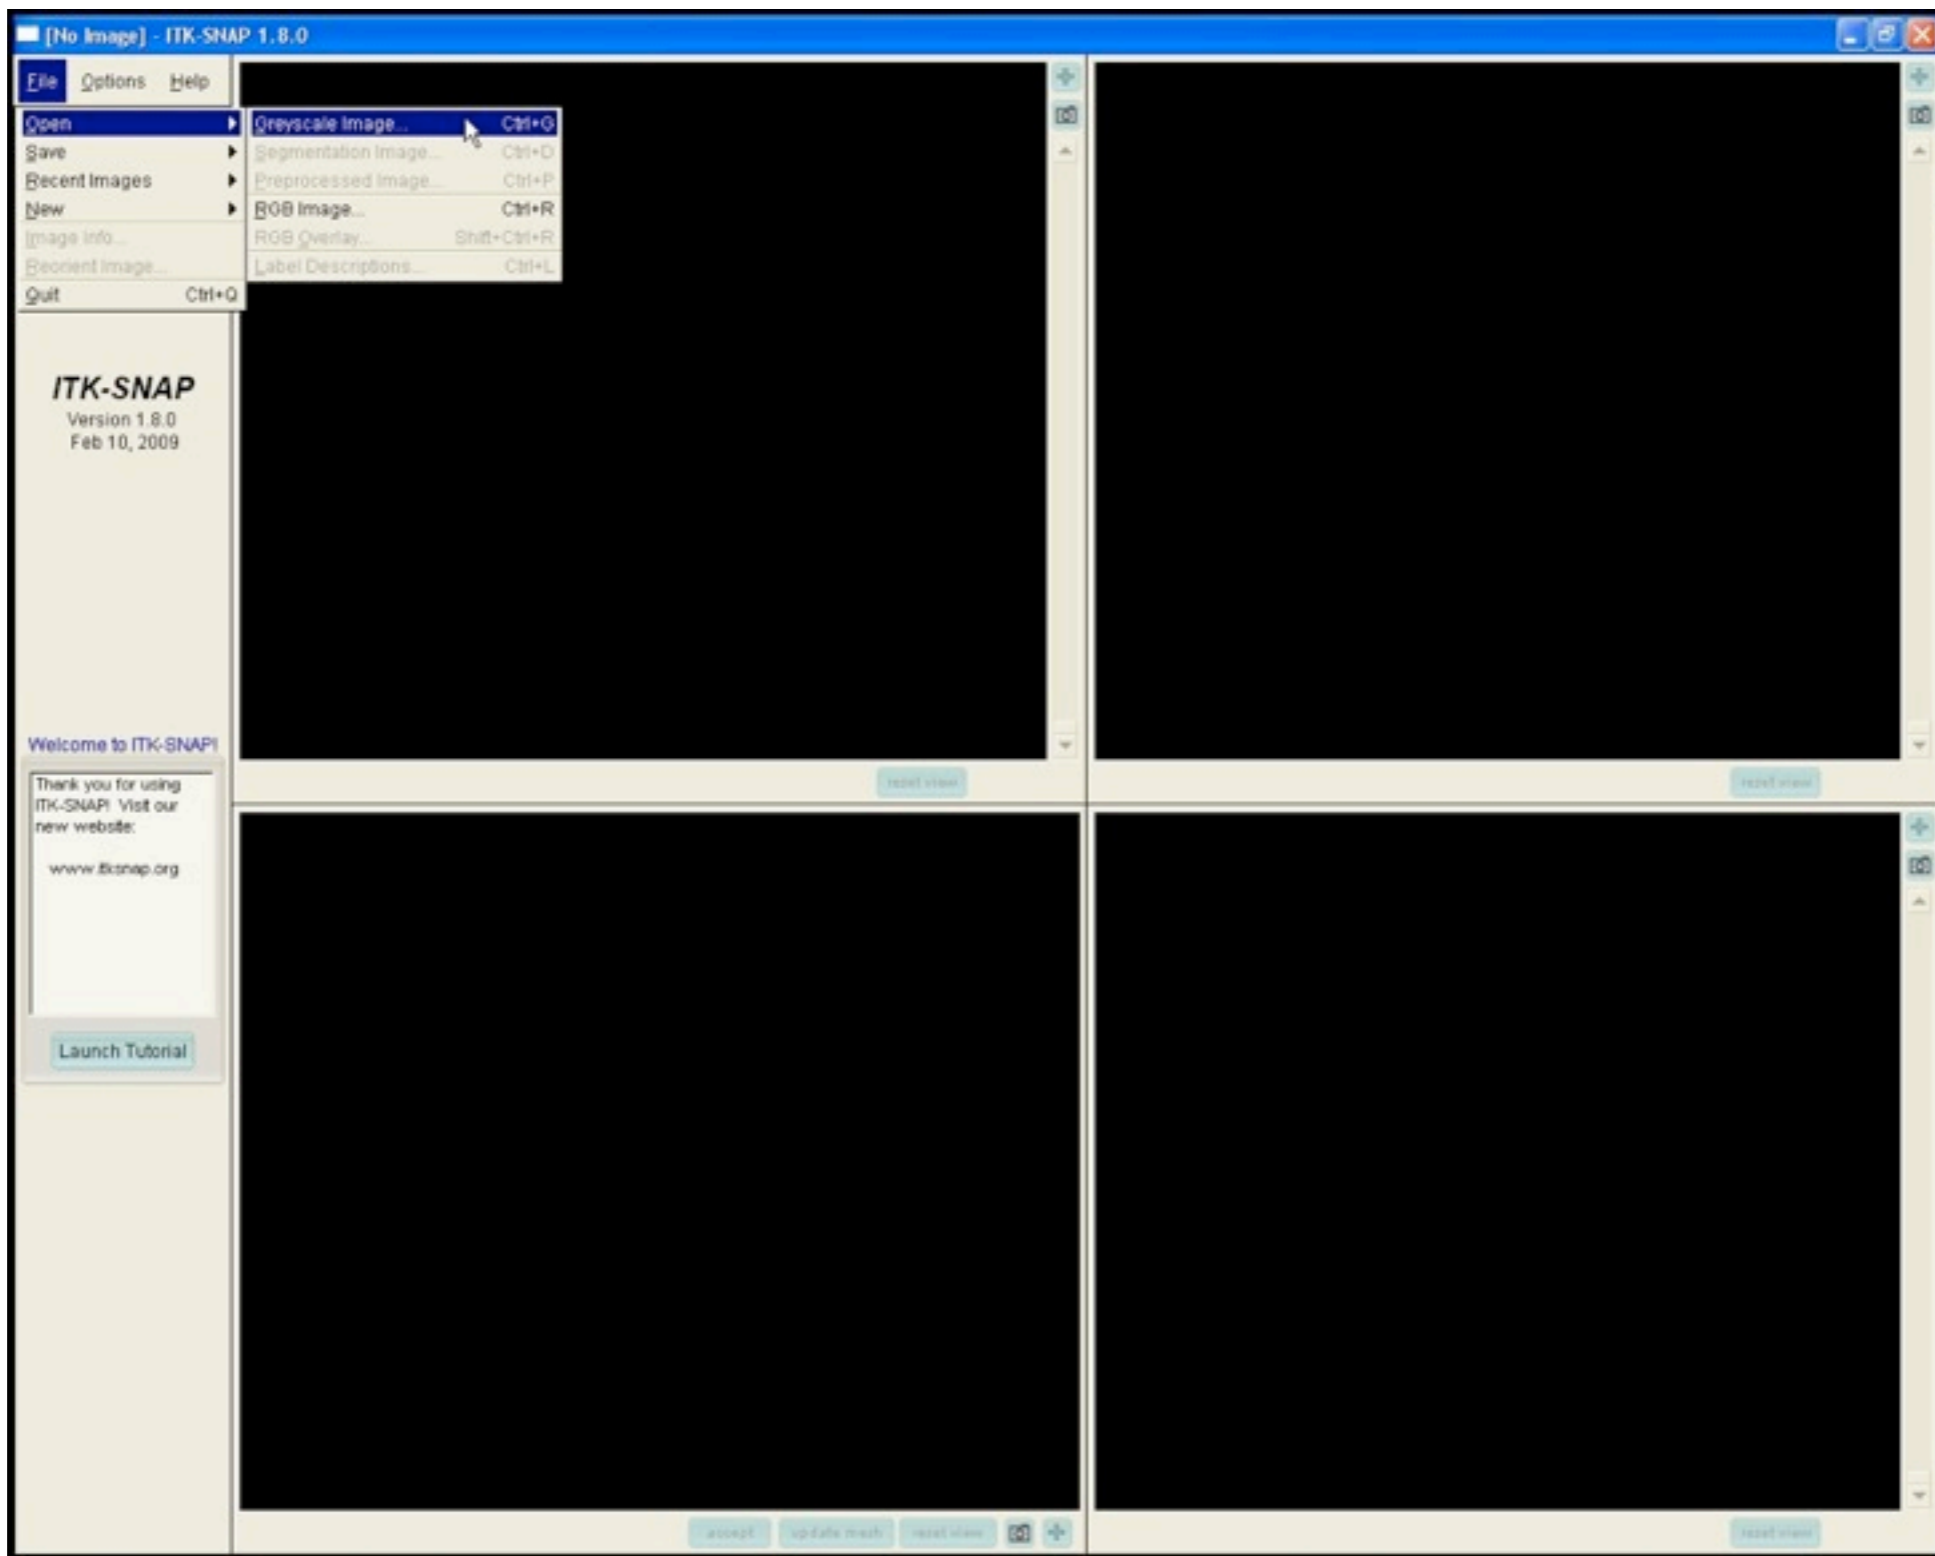

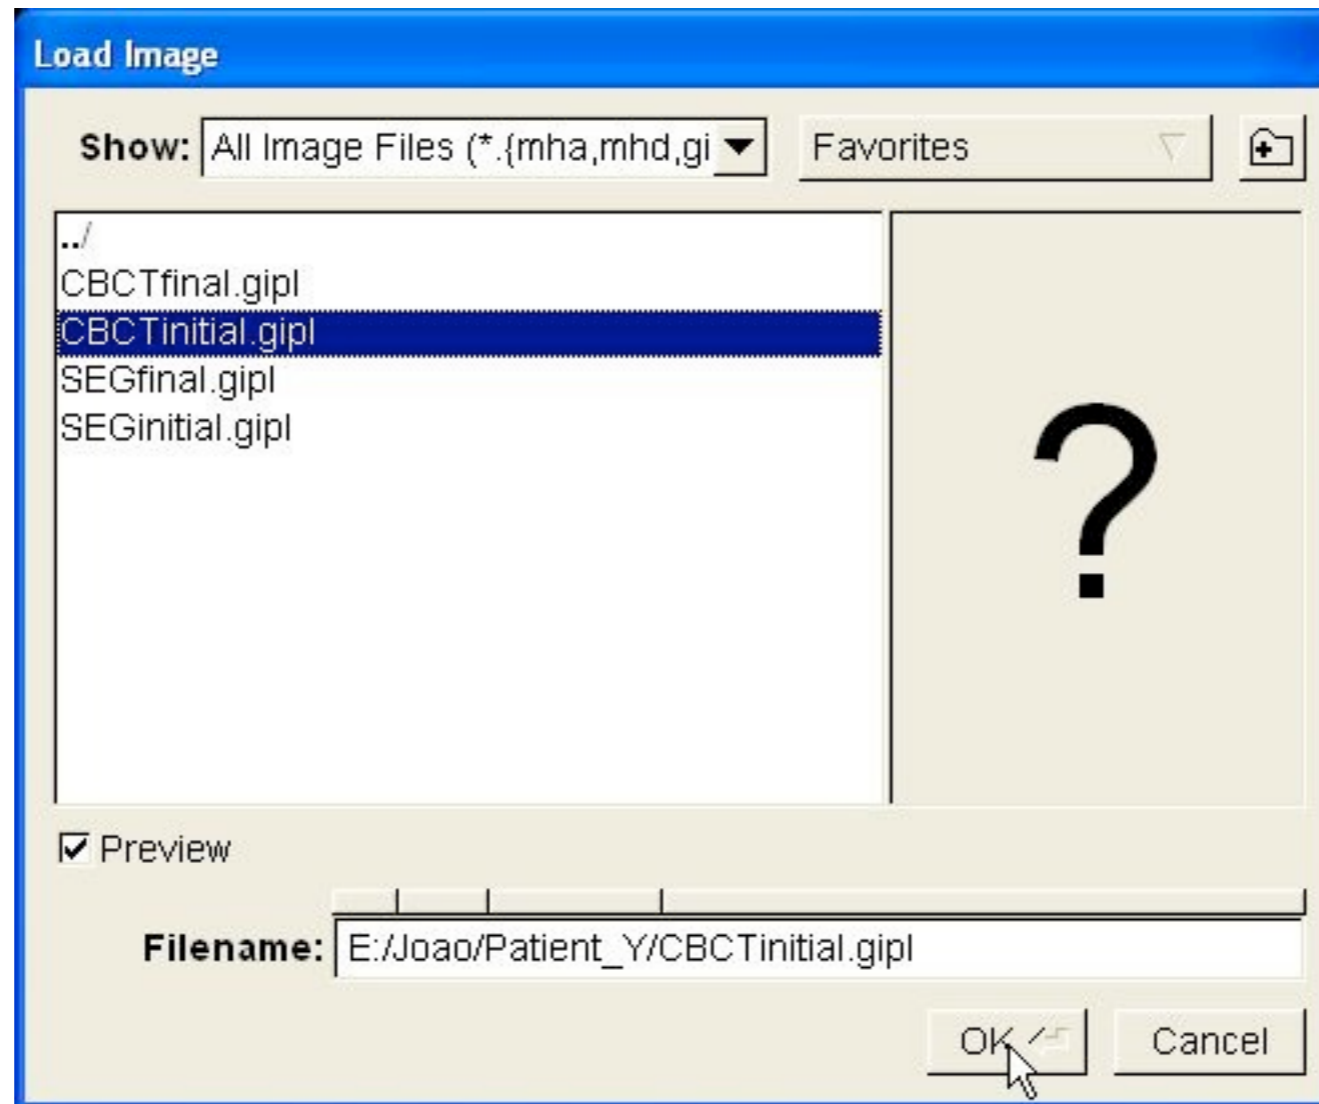

Wizard for loading a greyscale image

Image Summary:

File name:


Dimensions: Orientation:

 
Spacing: Origin:

 
Data type: Byte order:

 
Size in KB:

 
Additional Information:

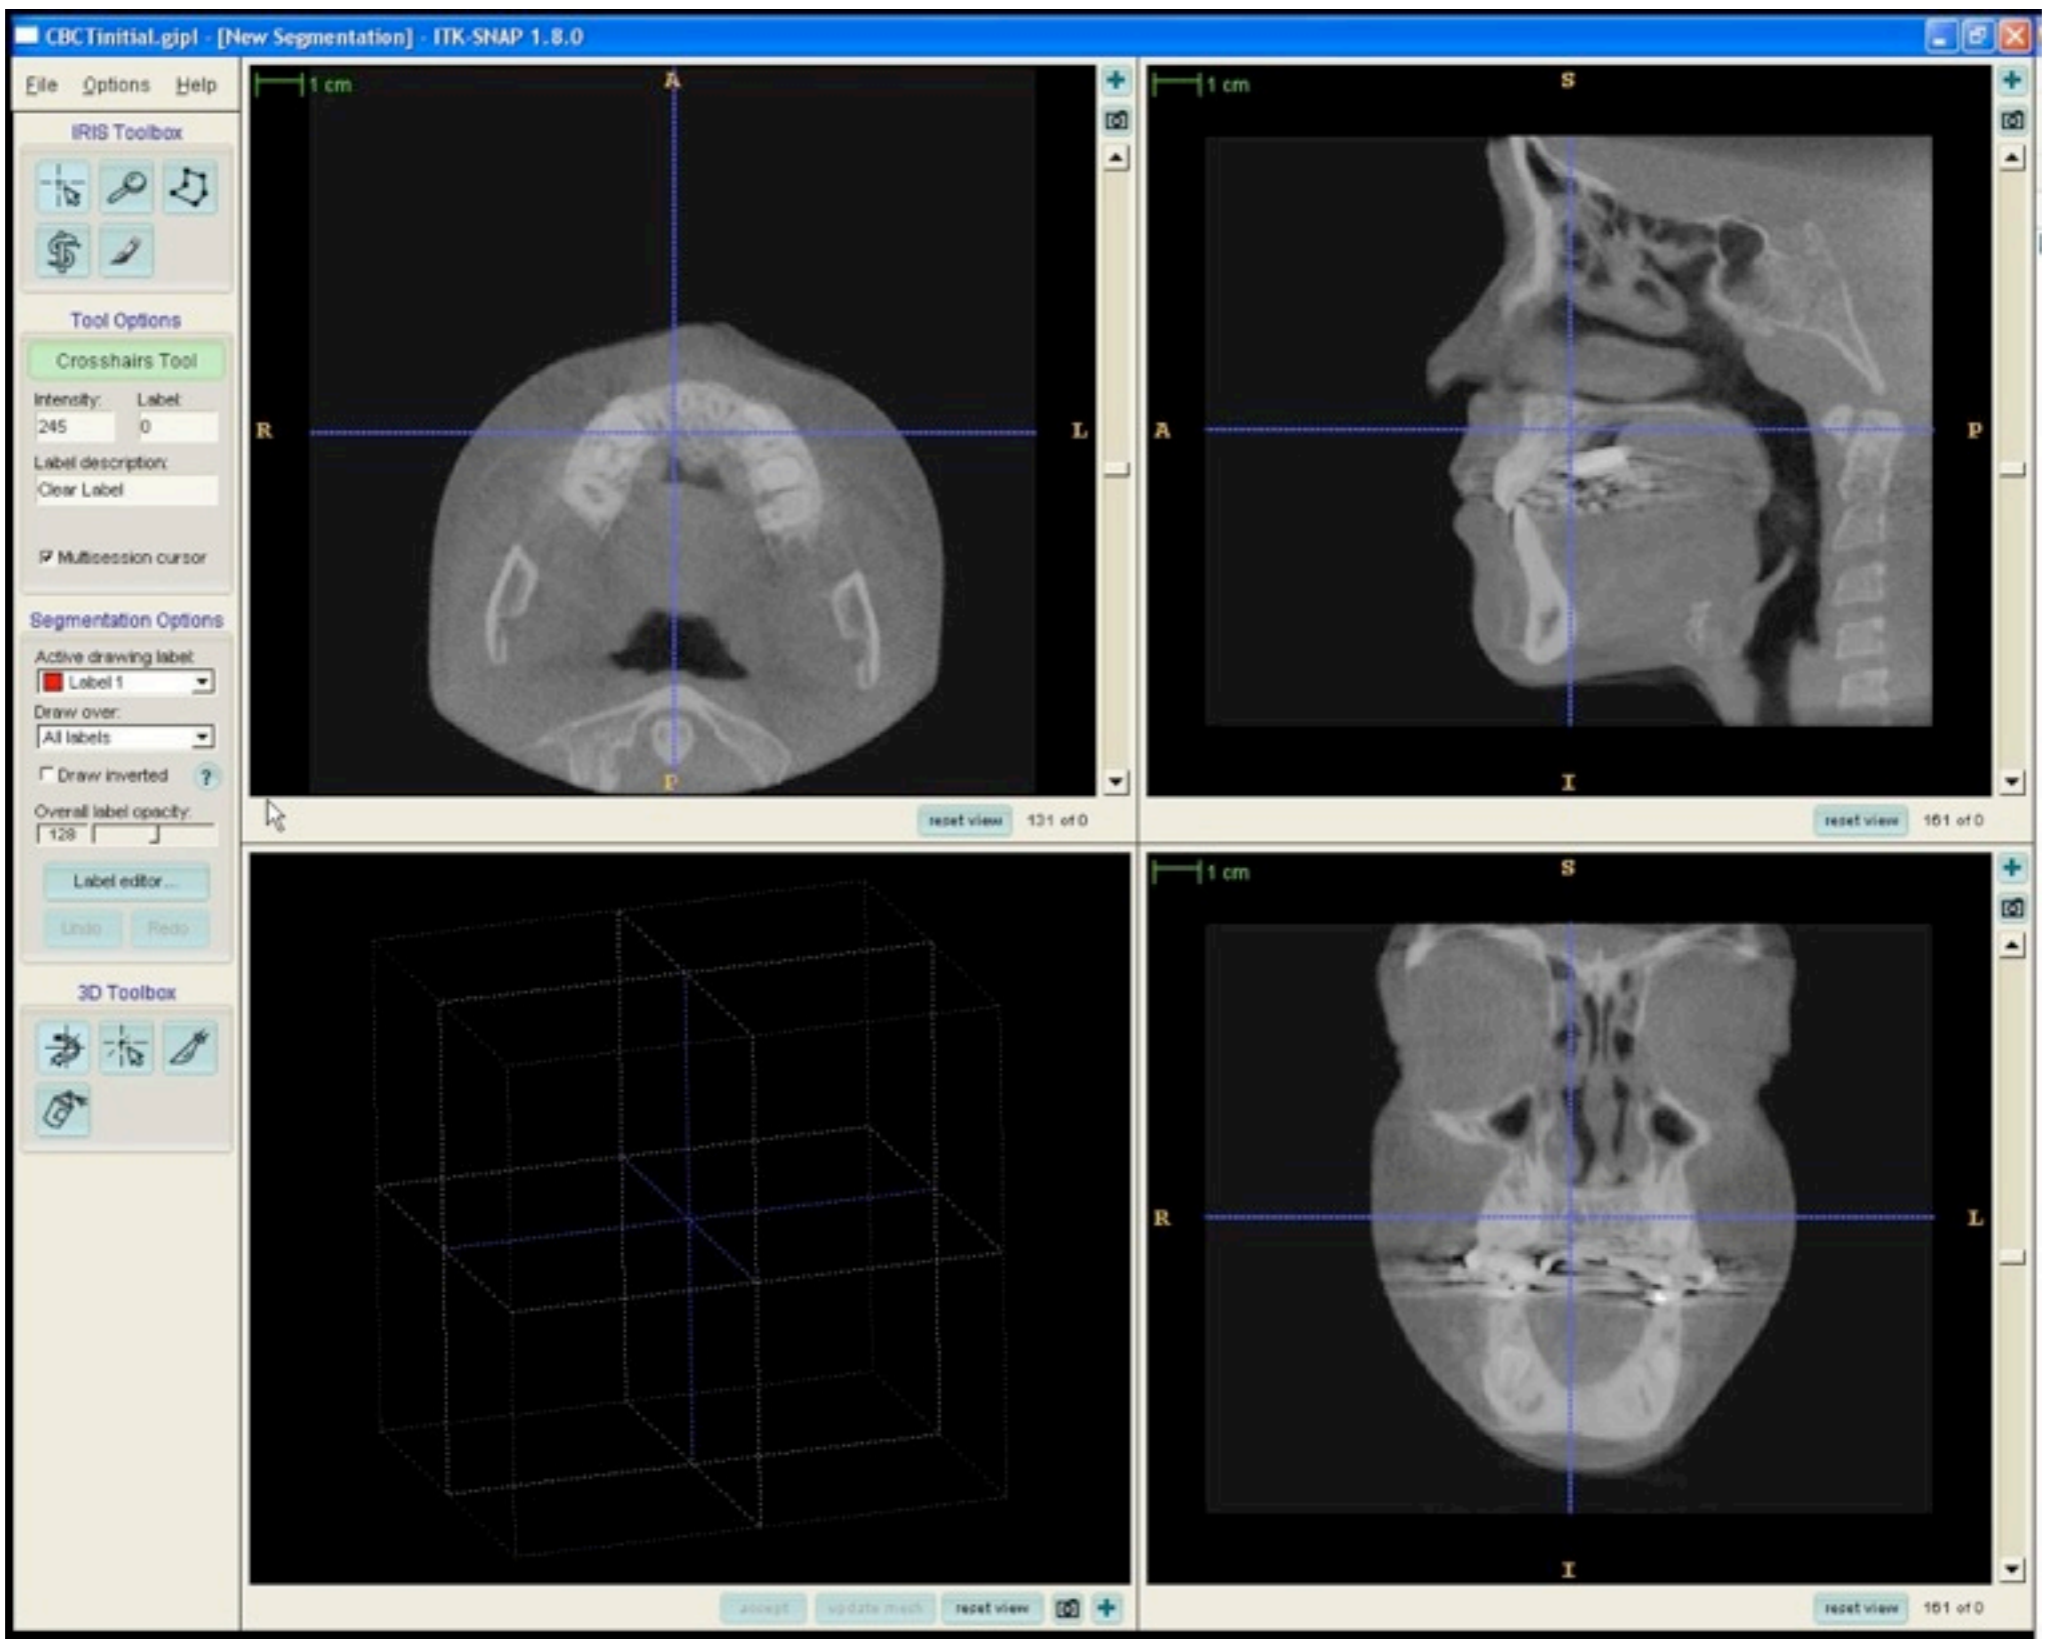


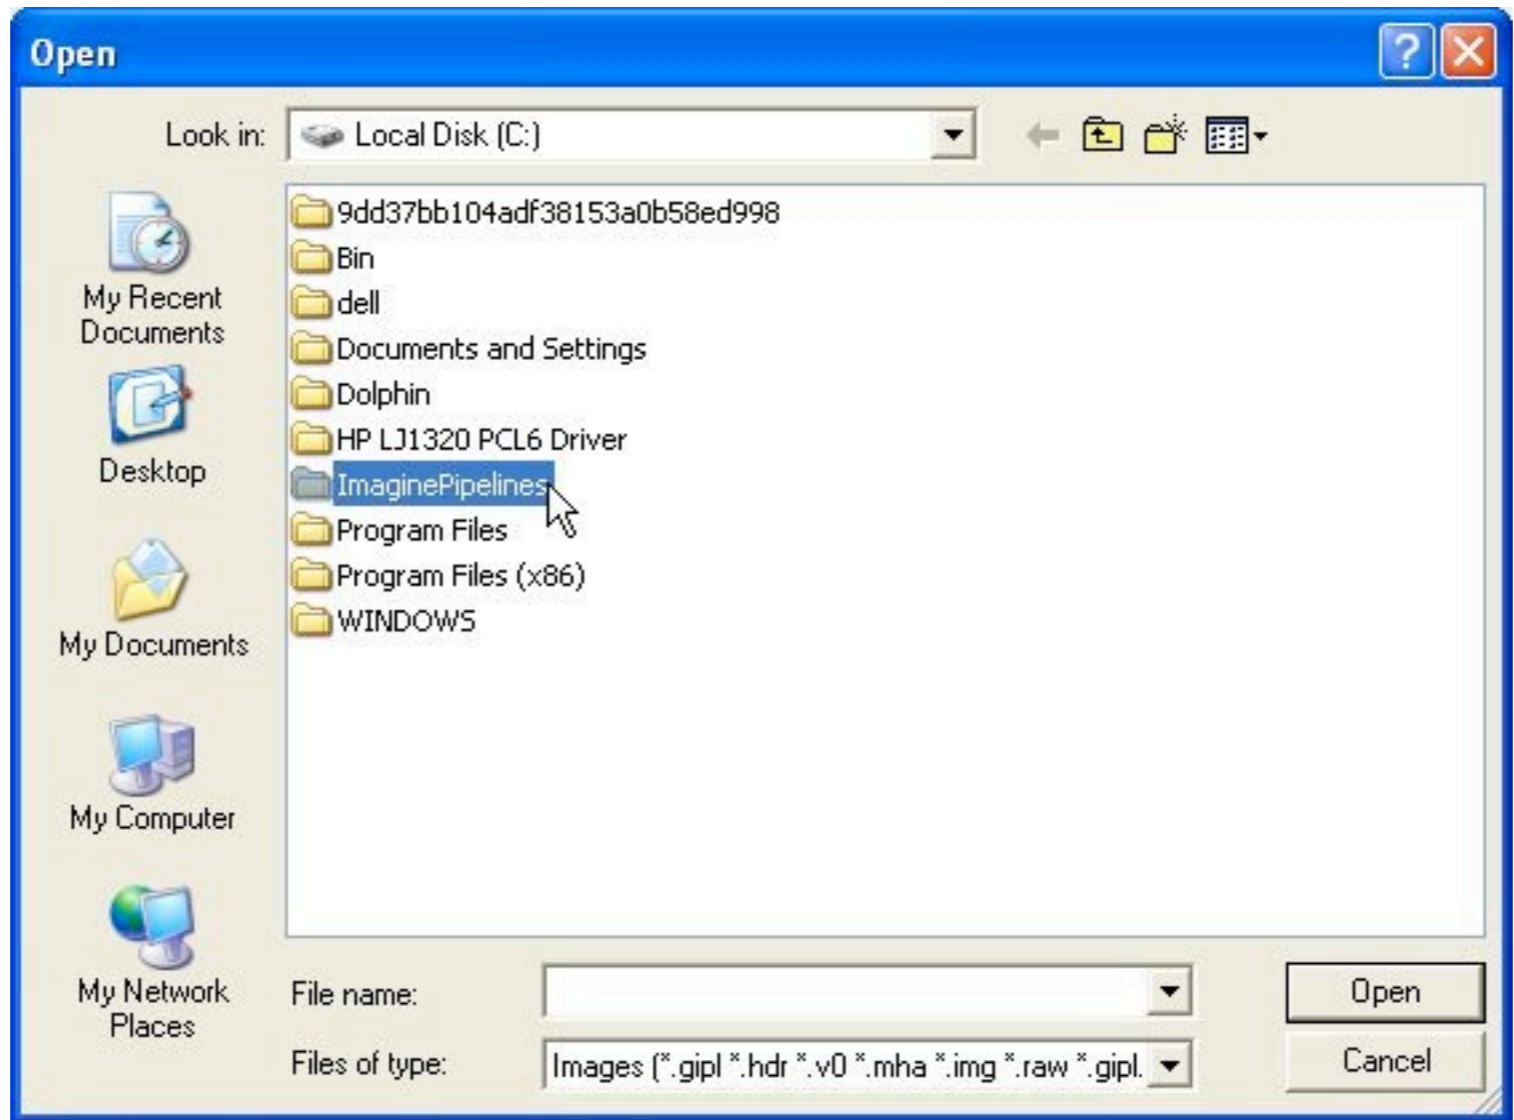 


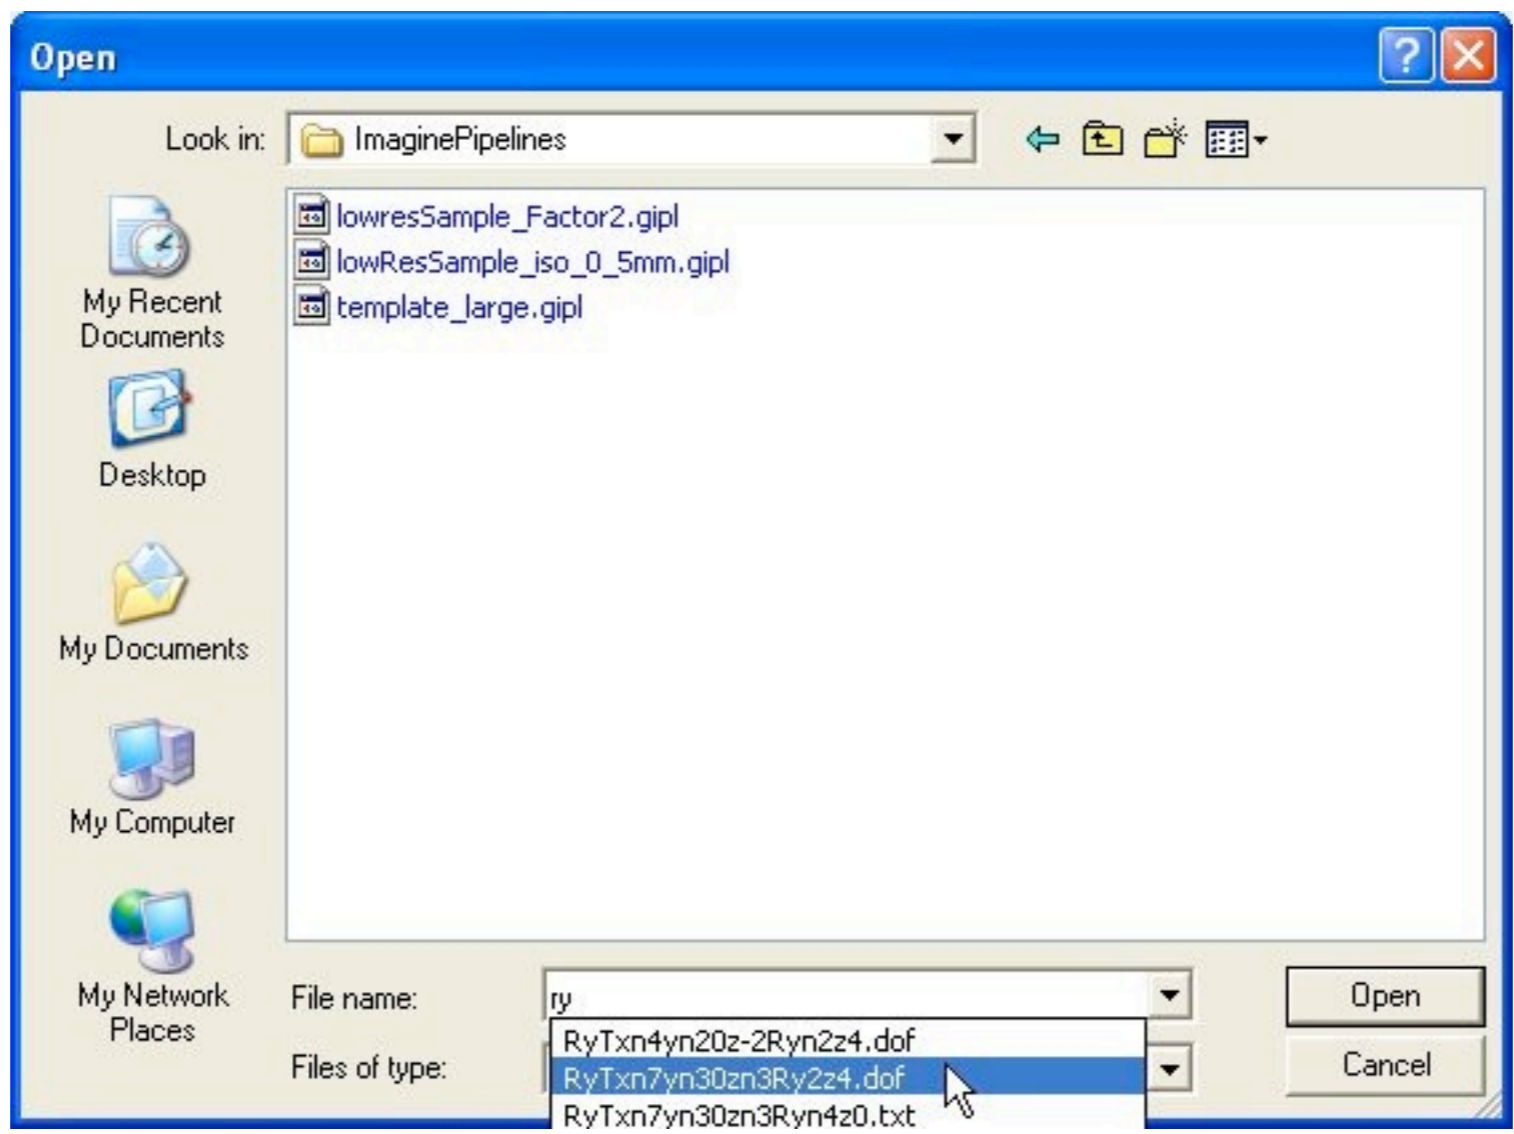


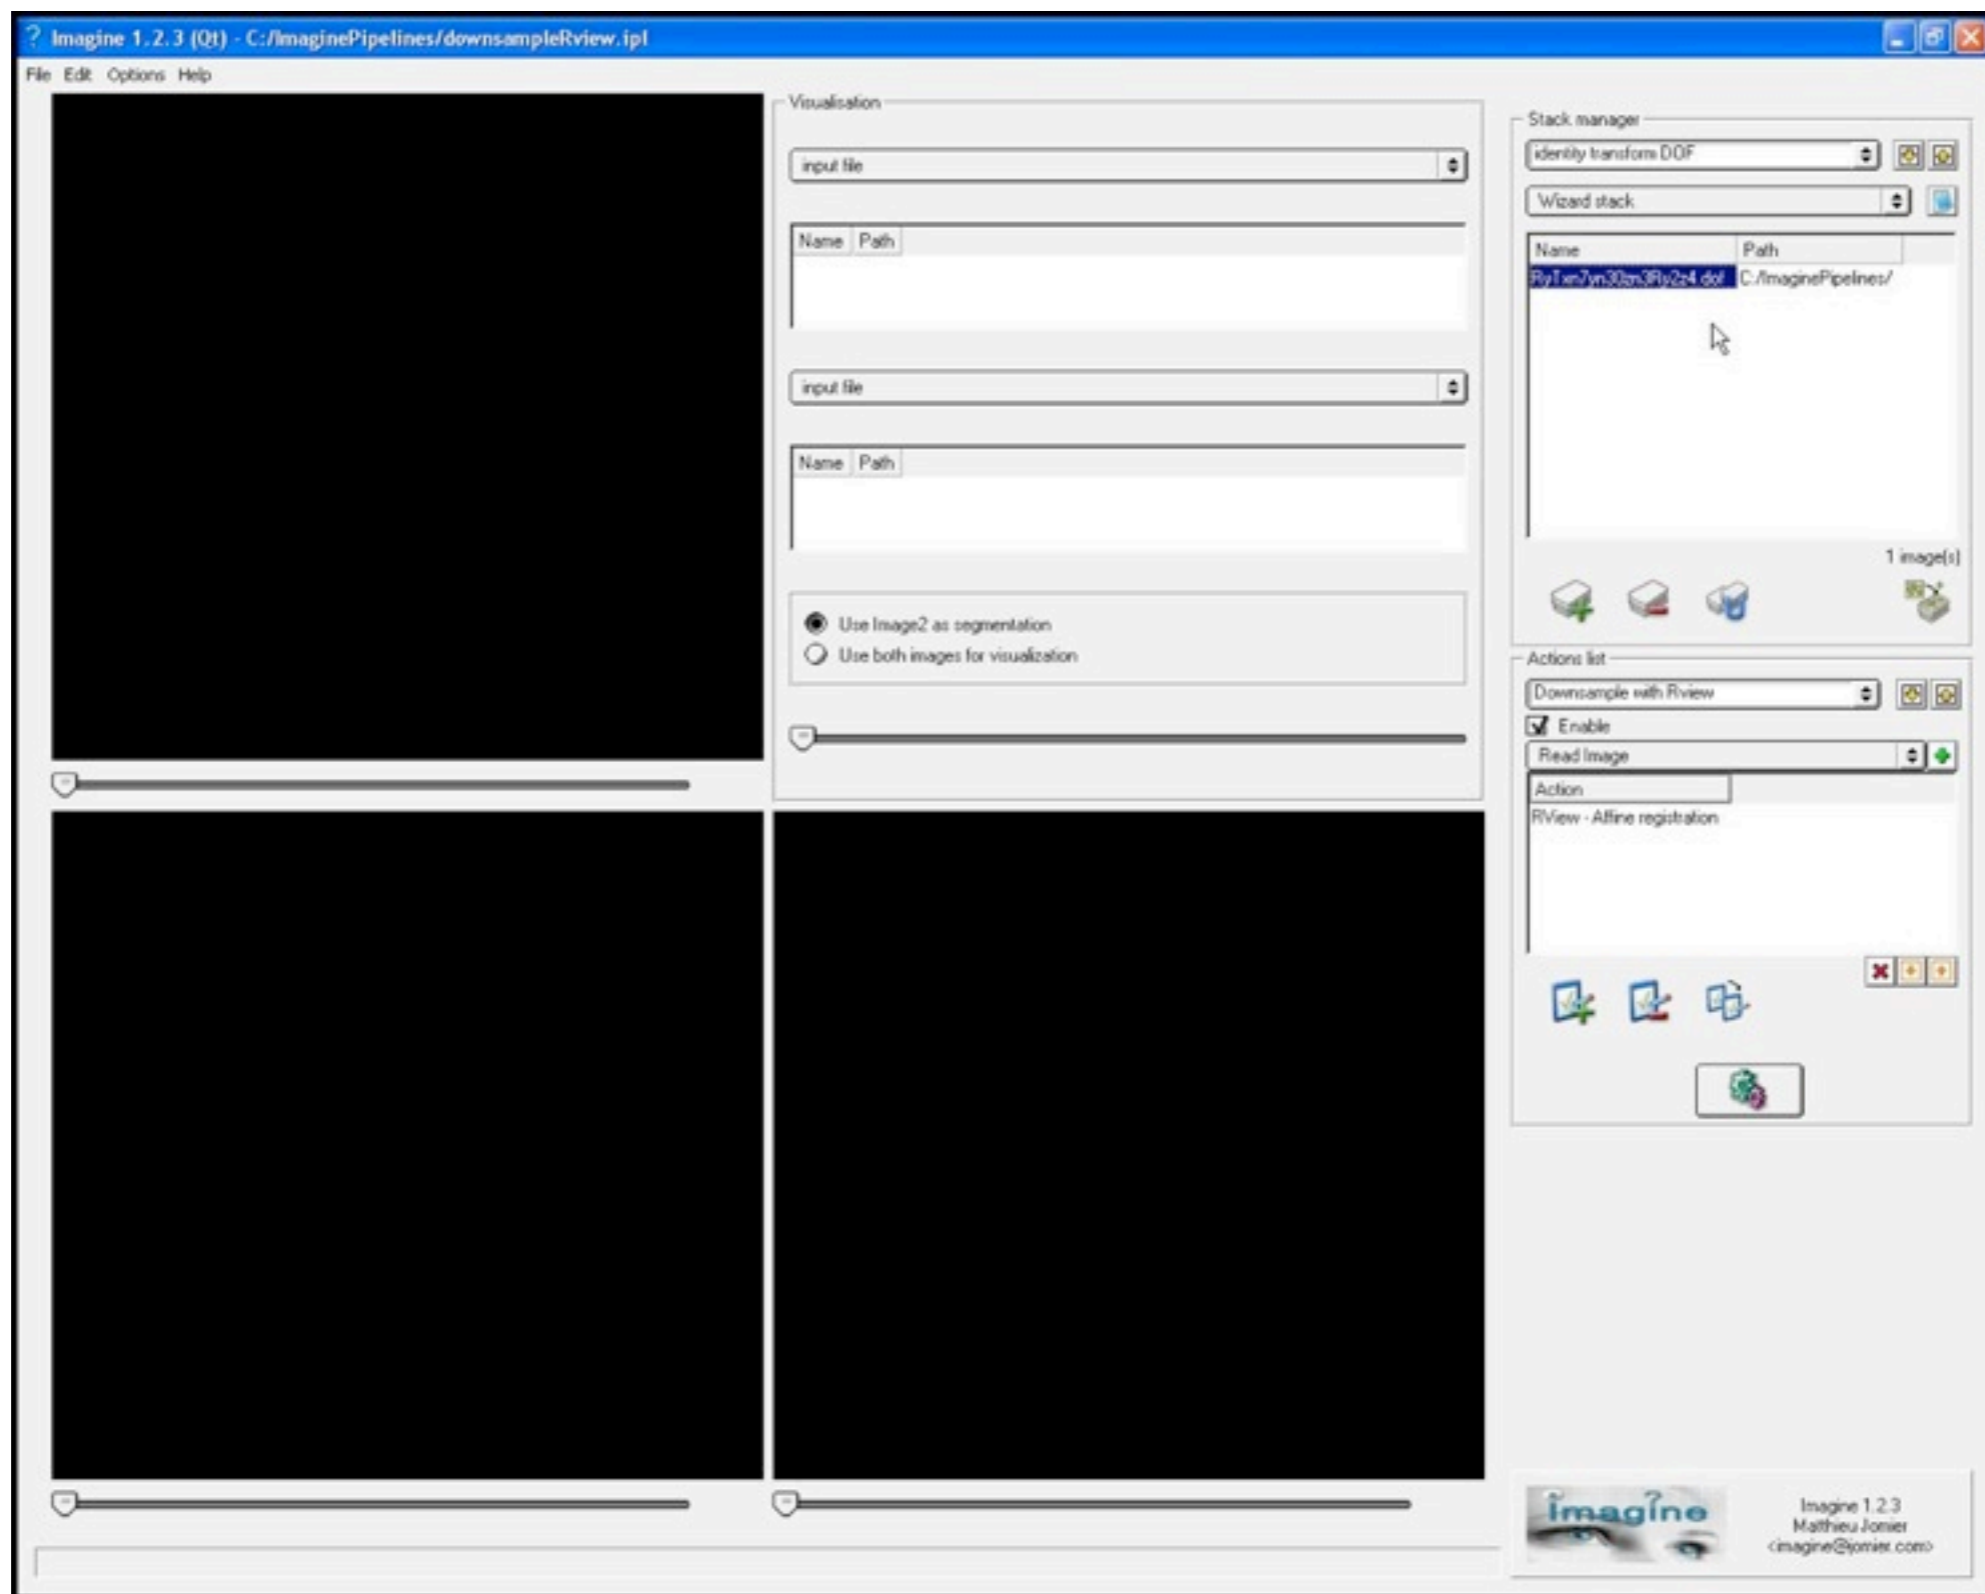 


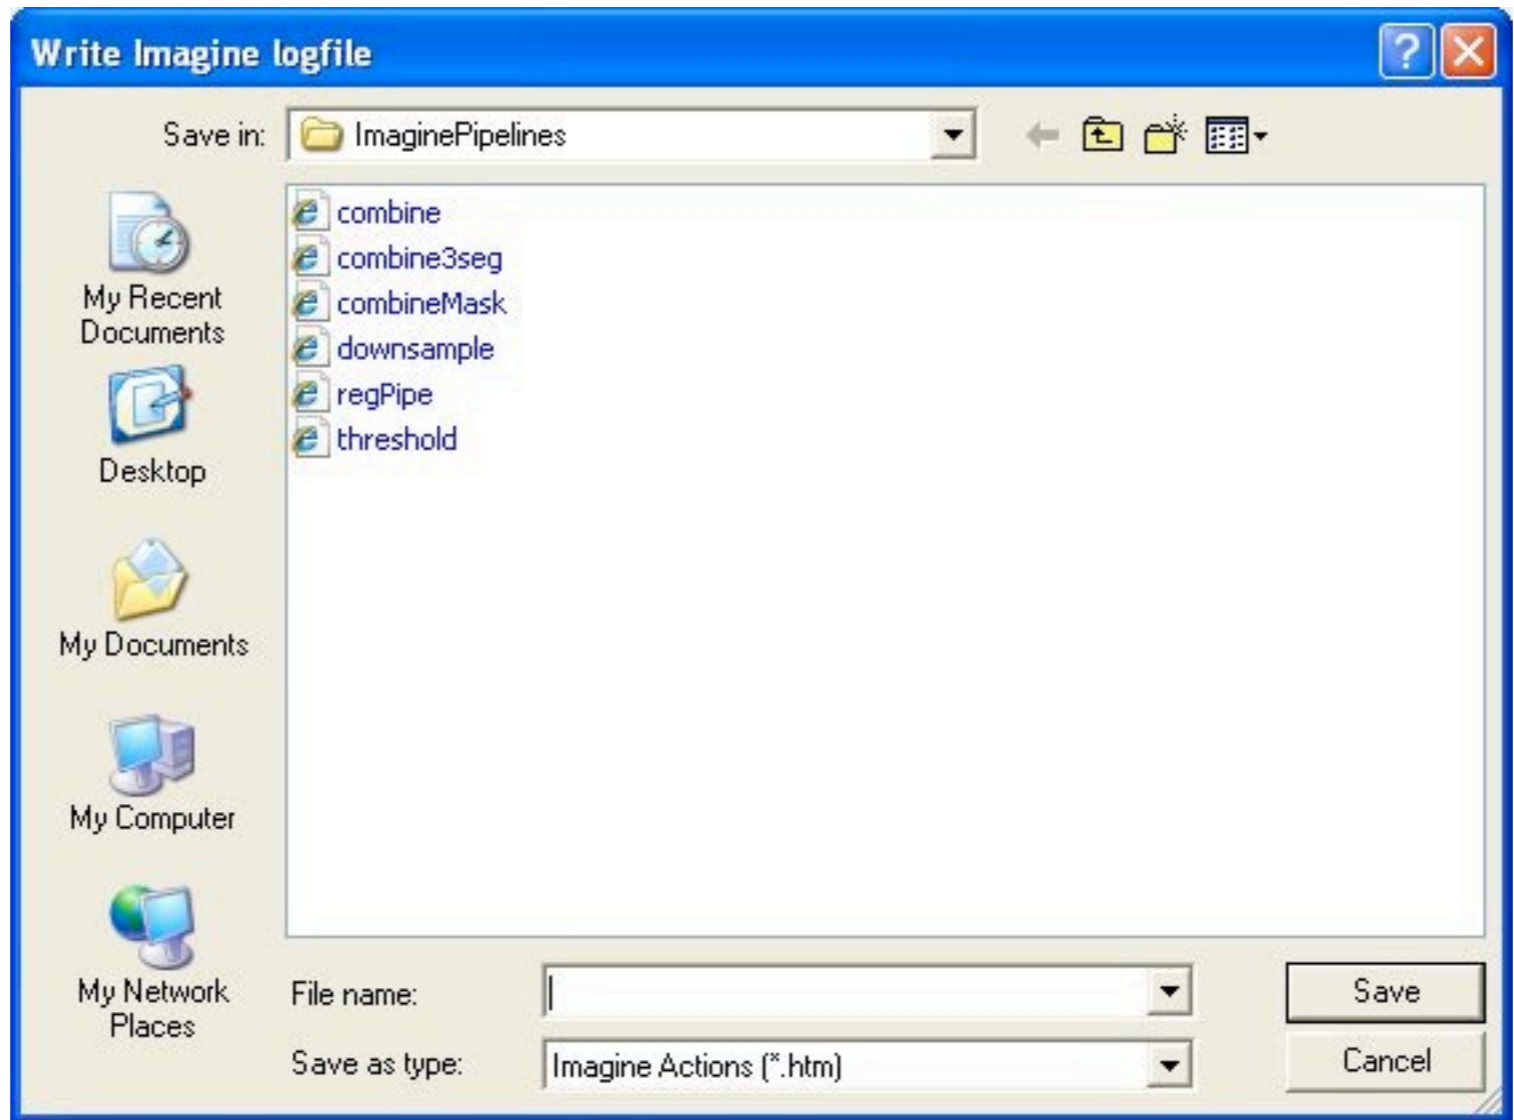 


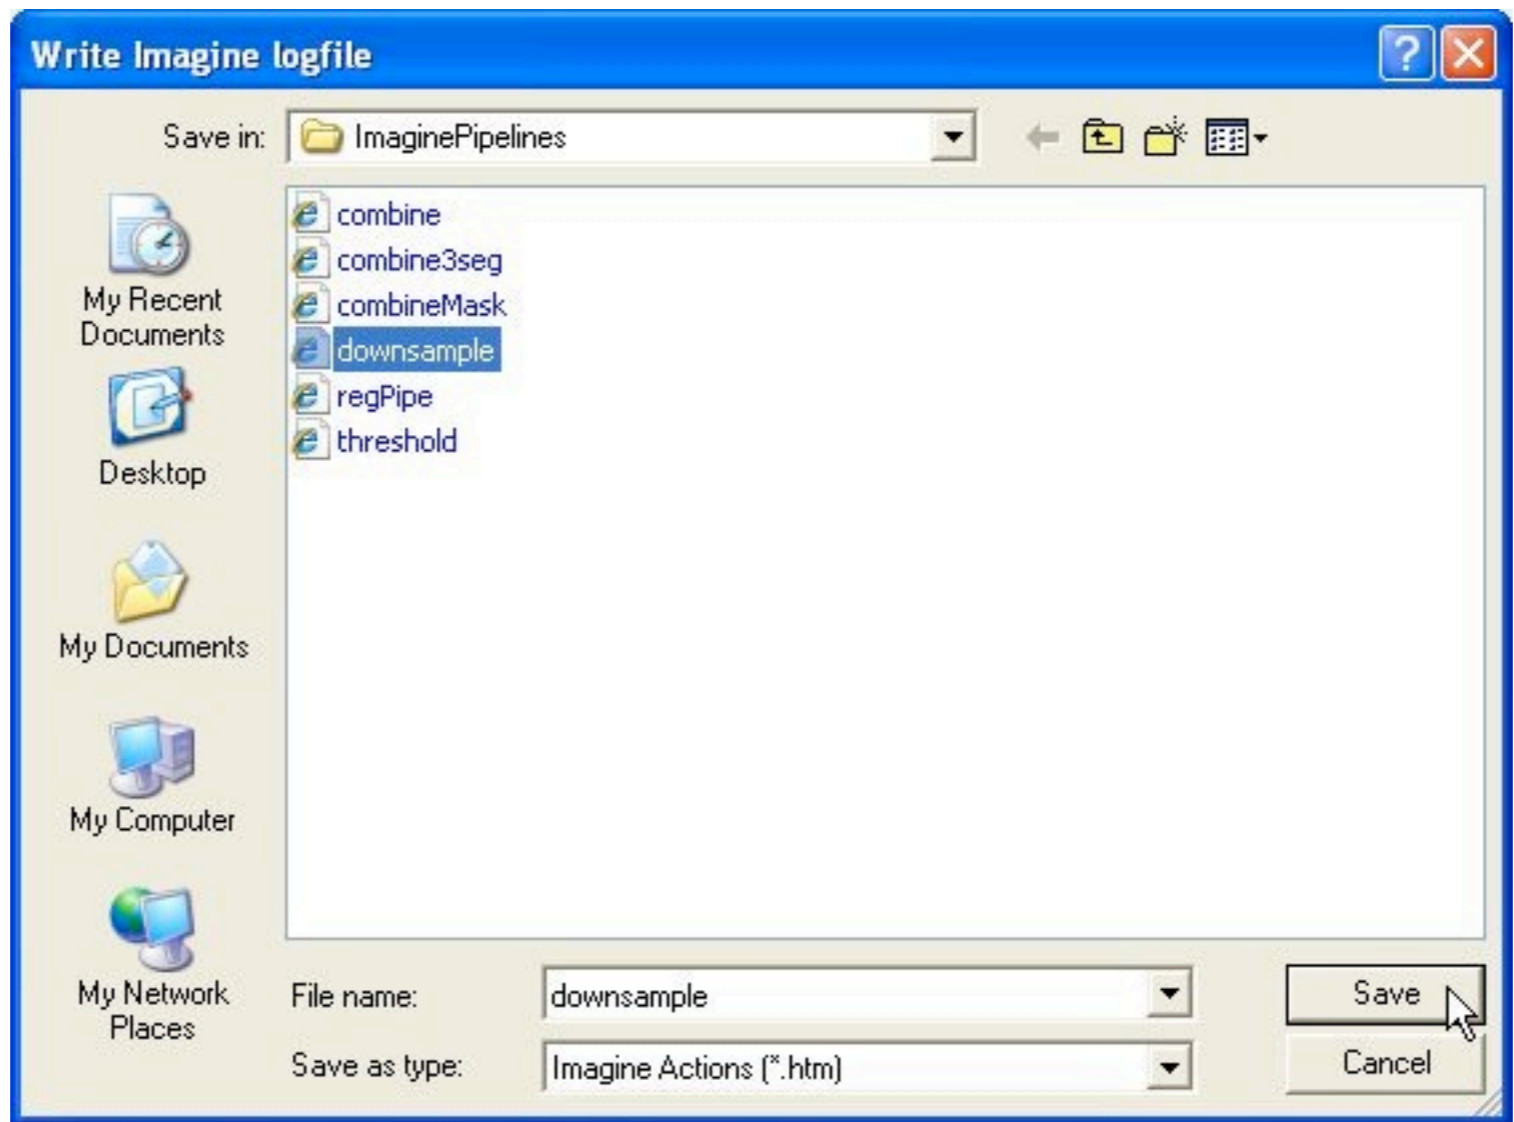

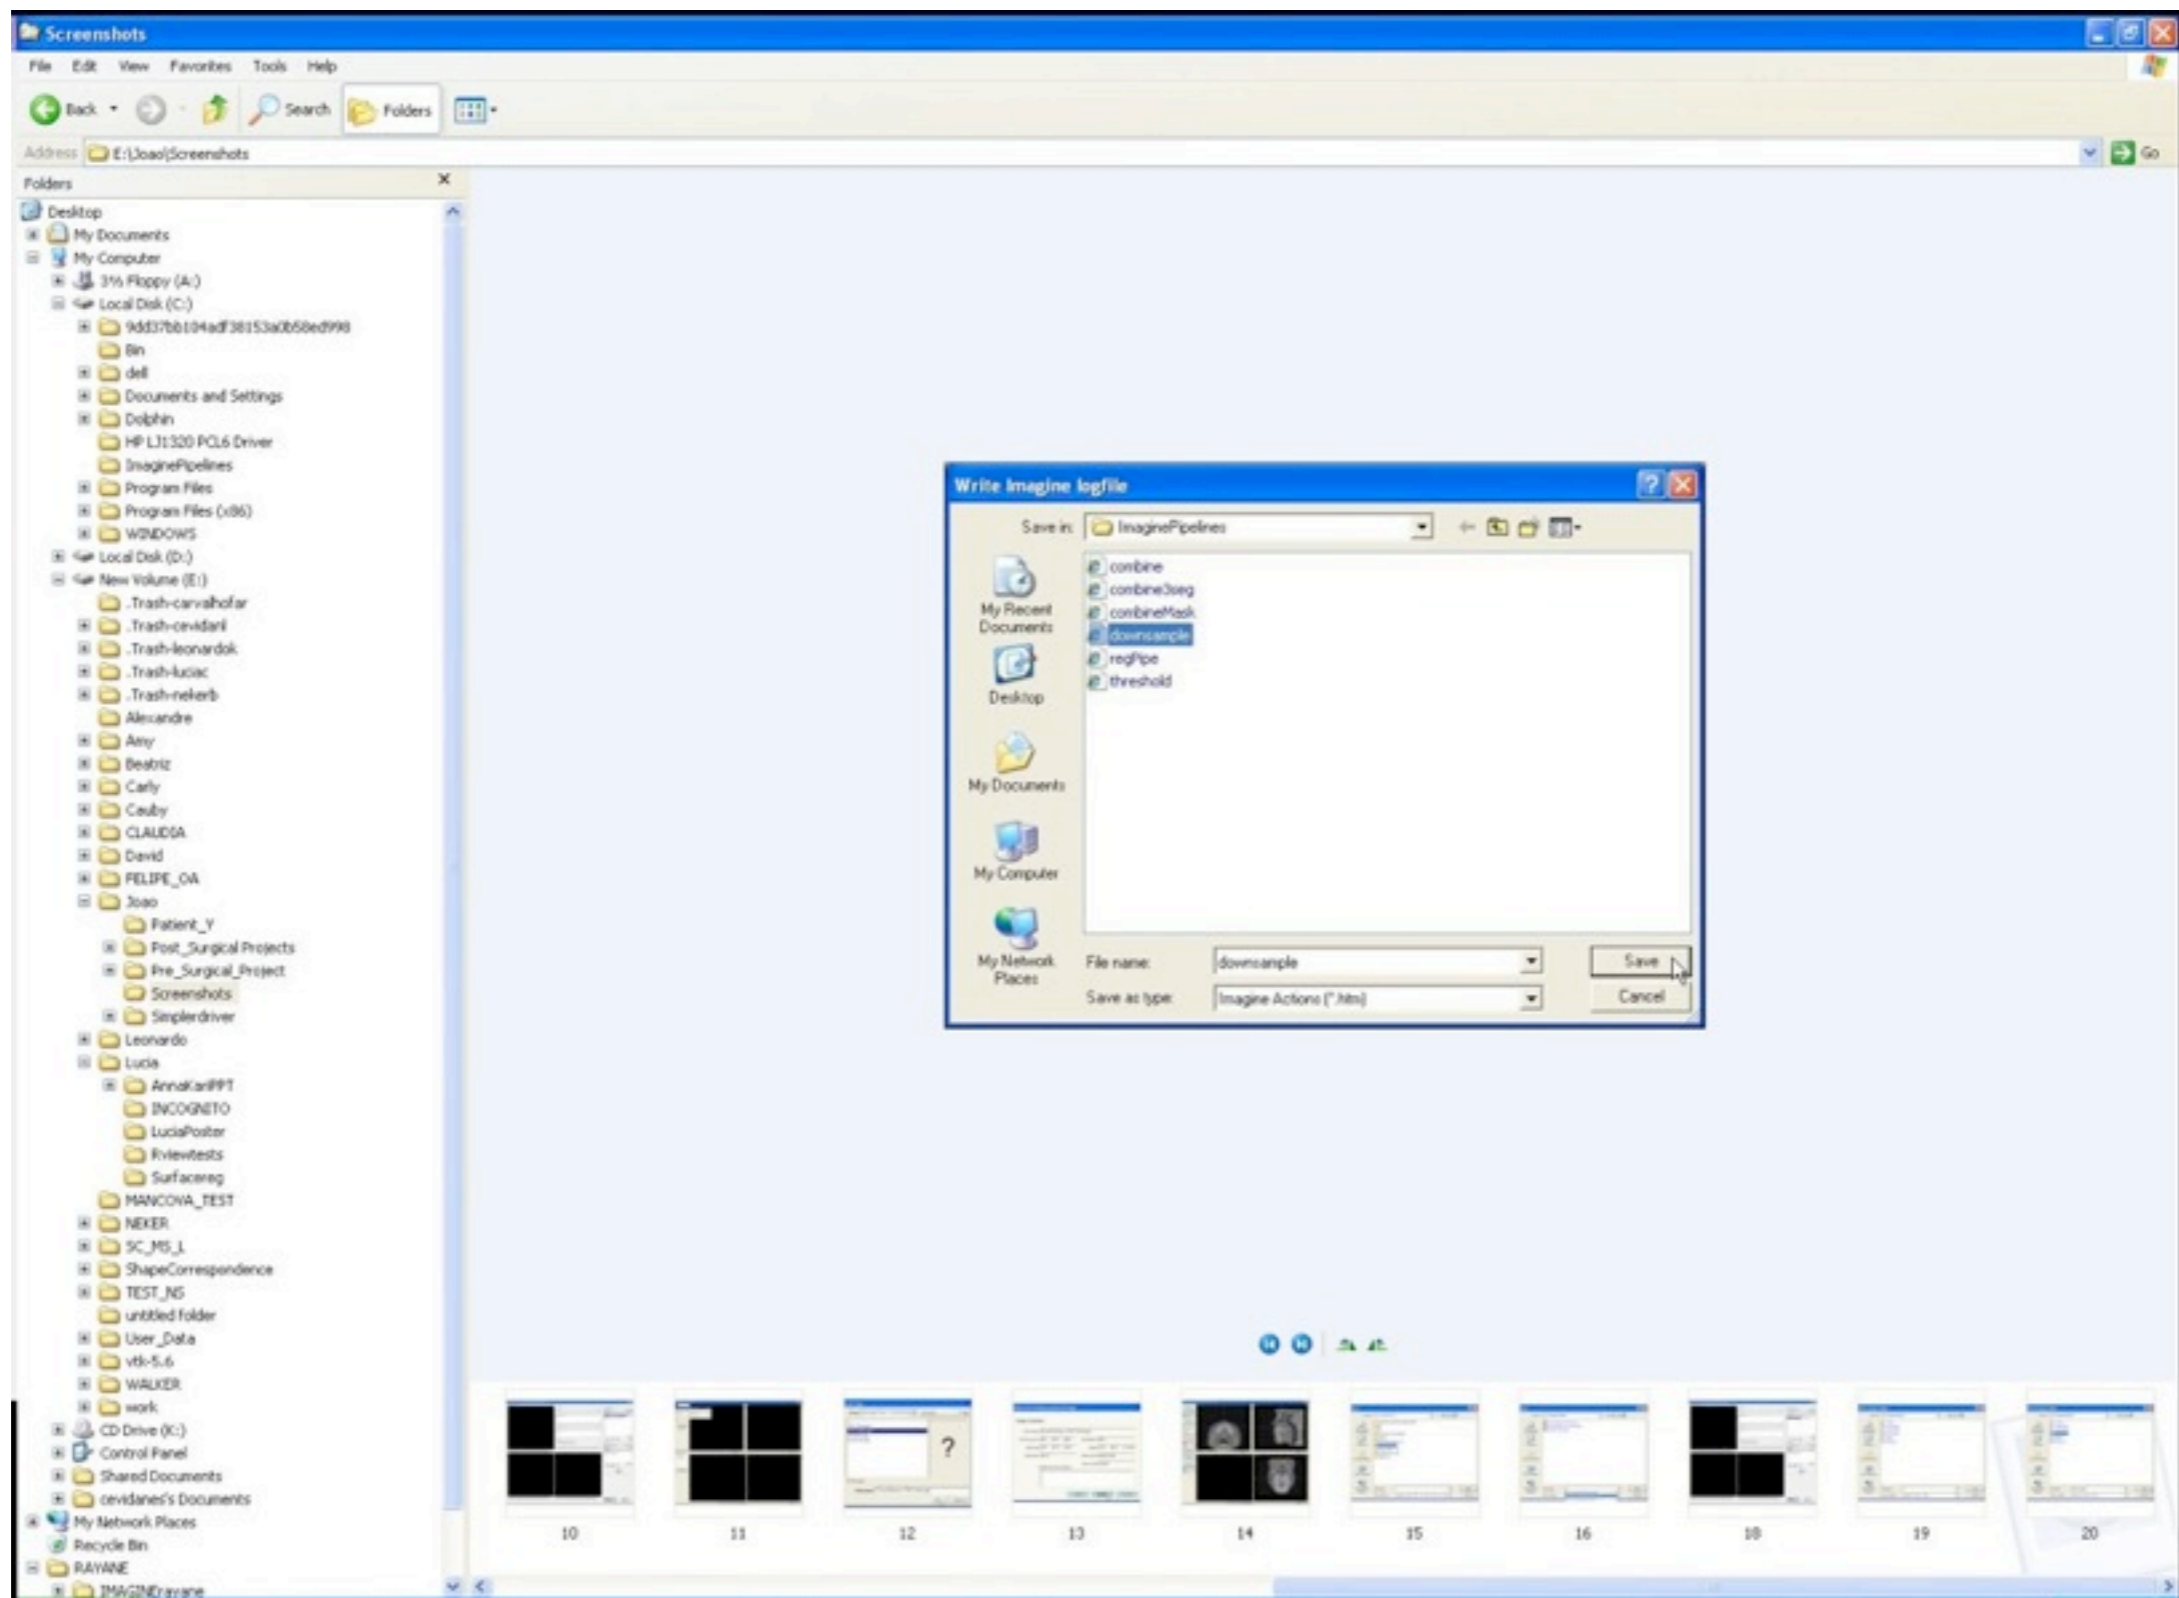

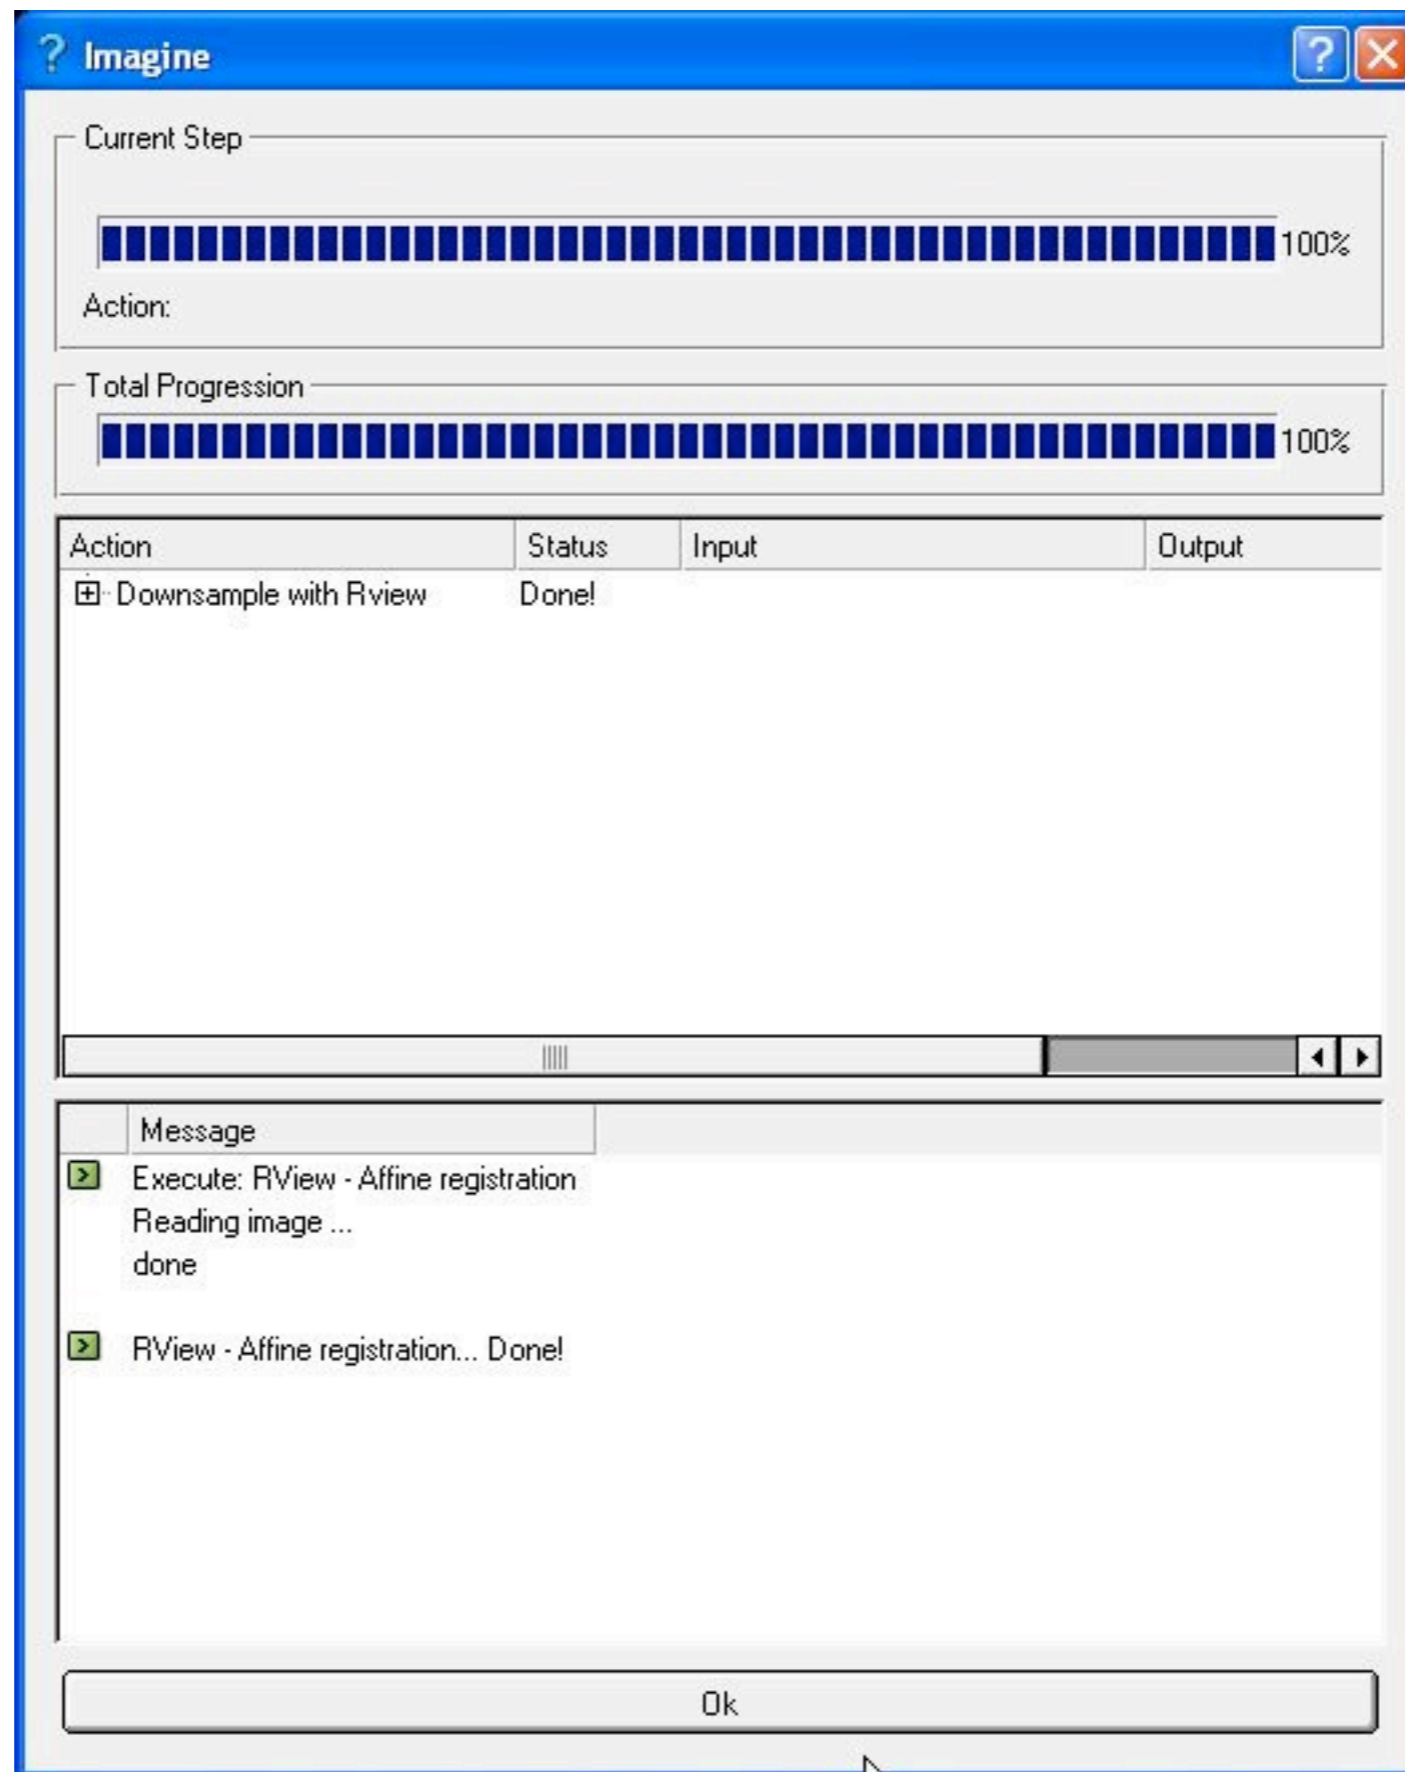

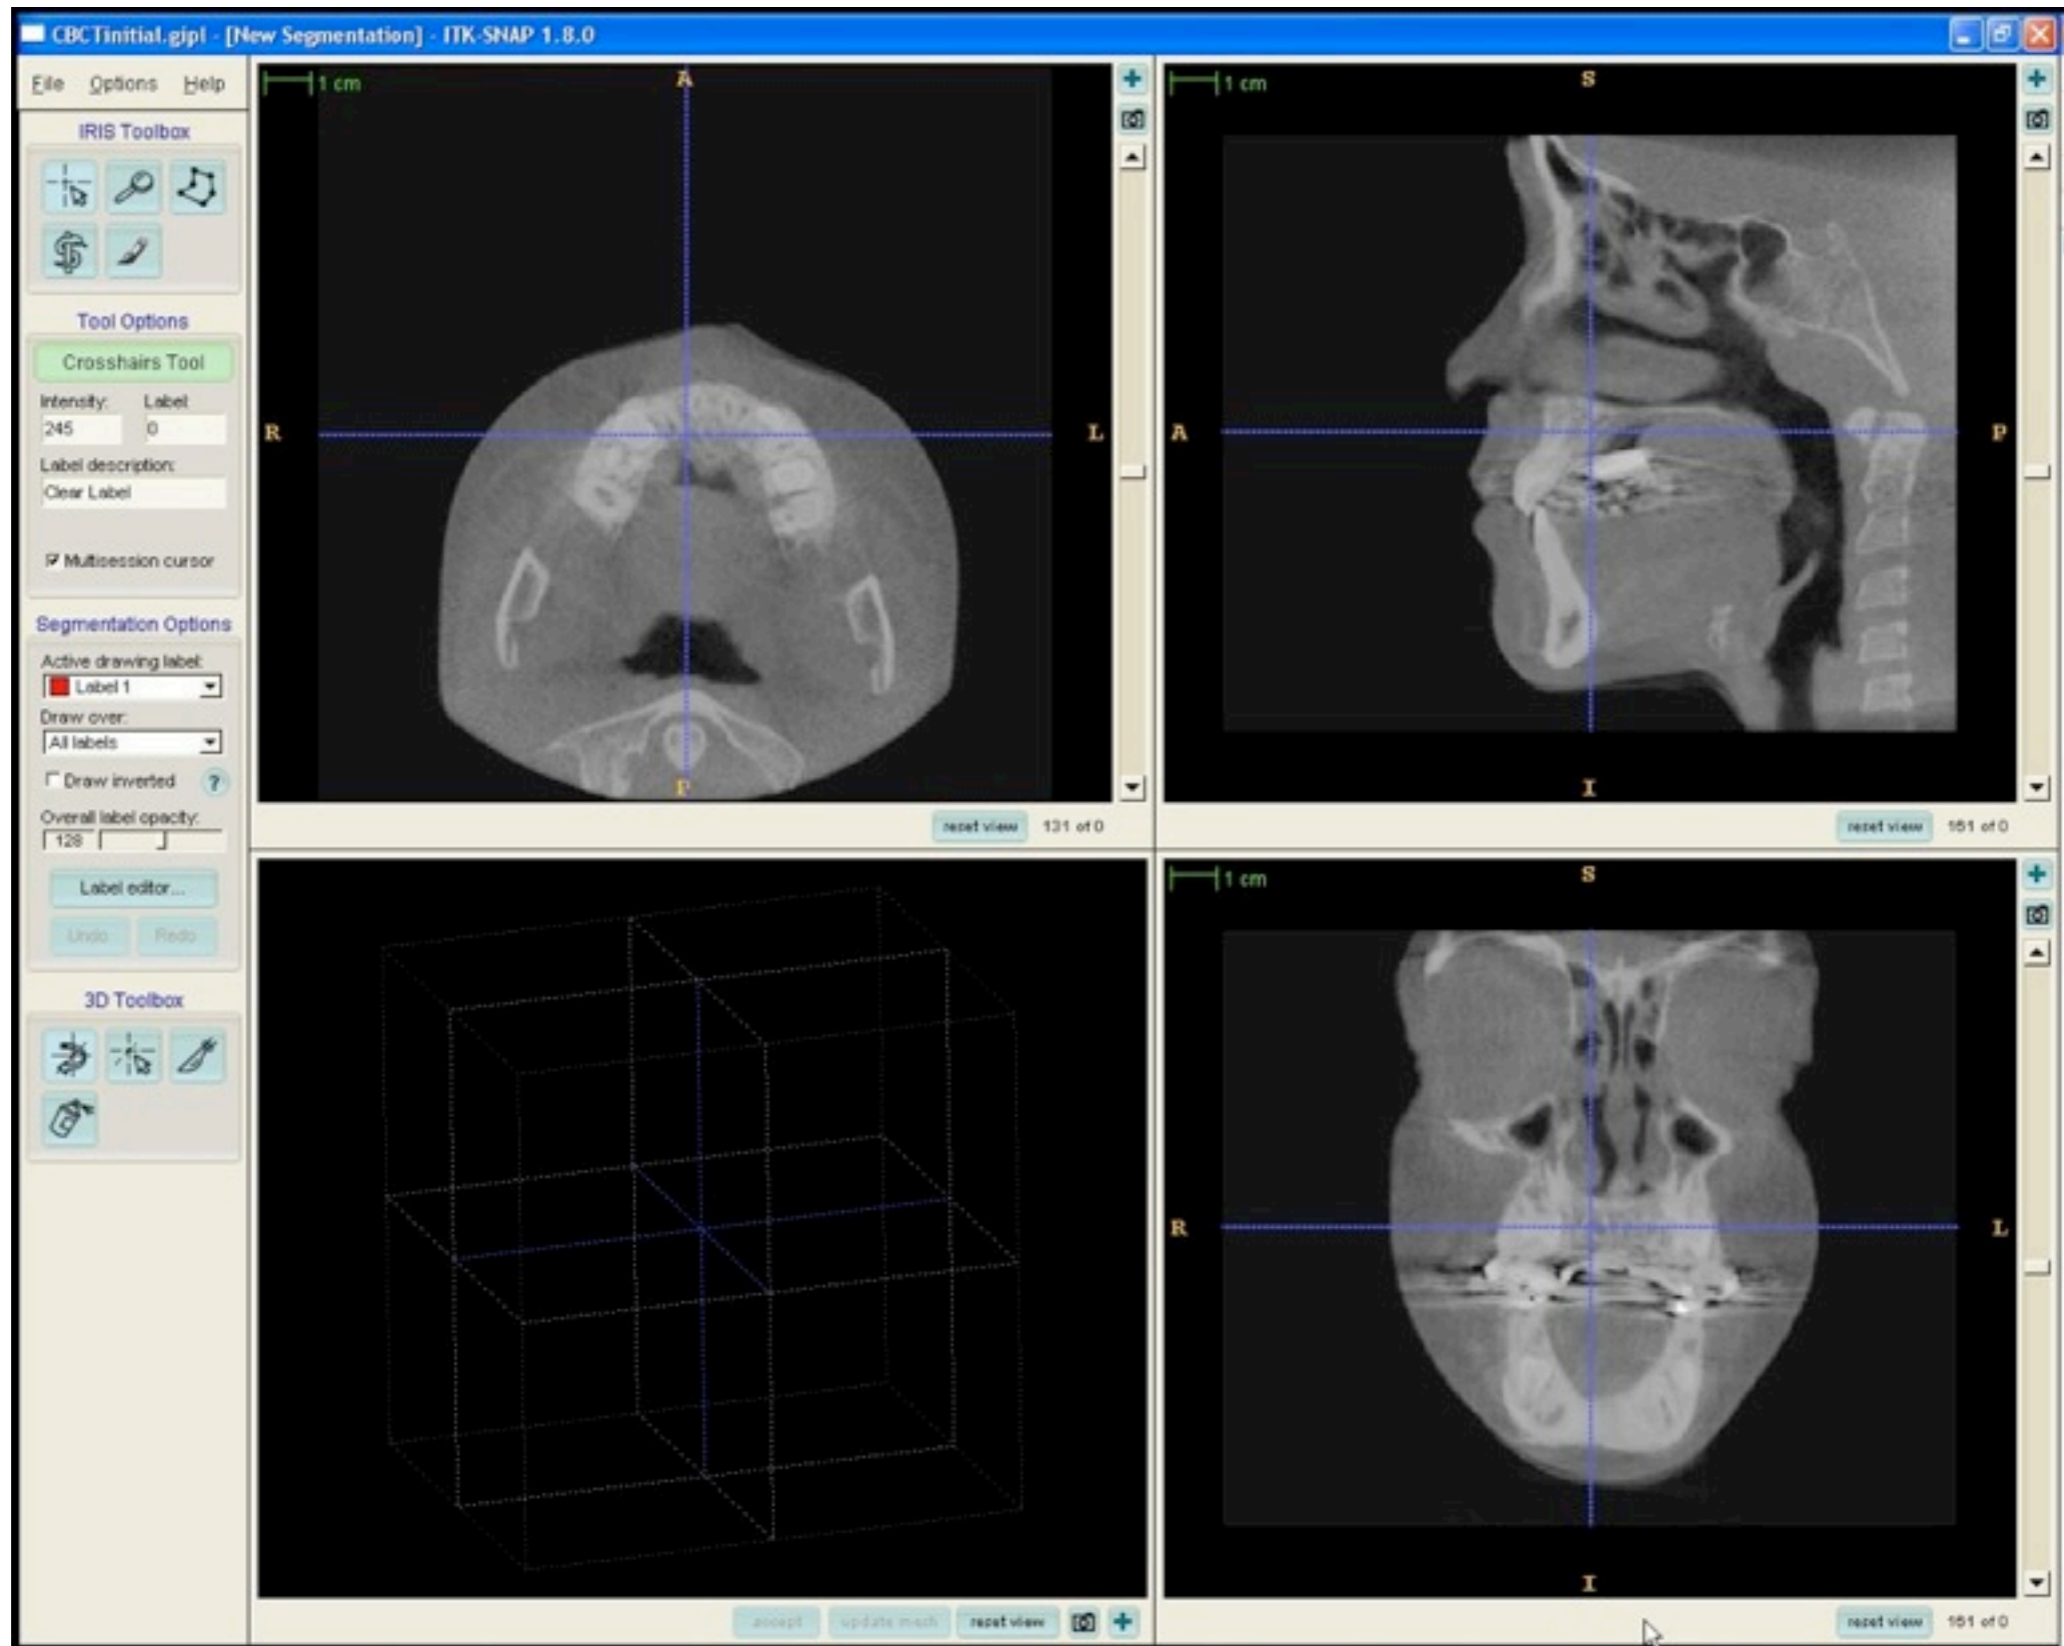

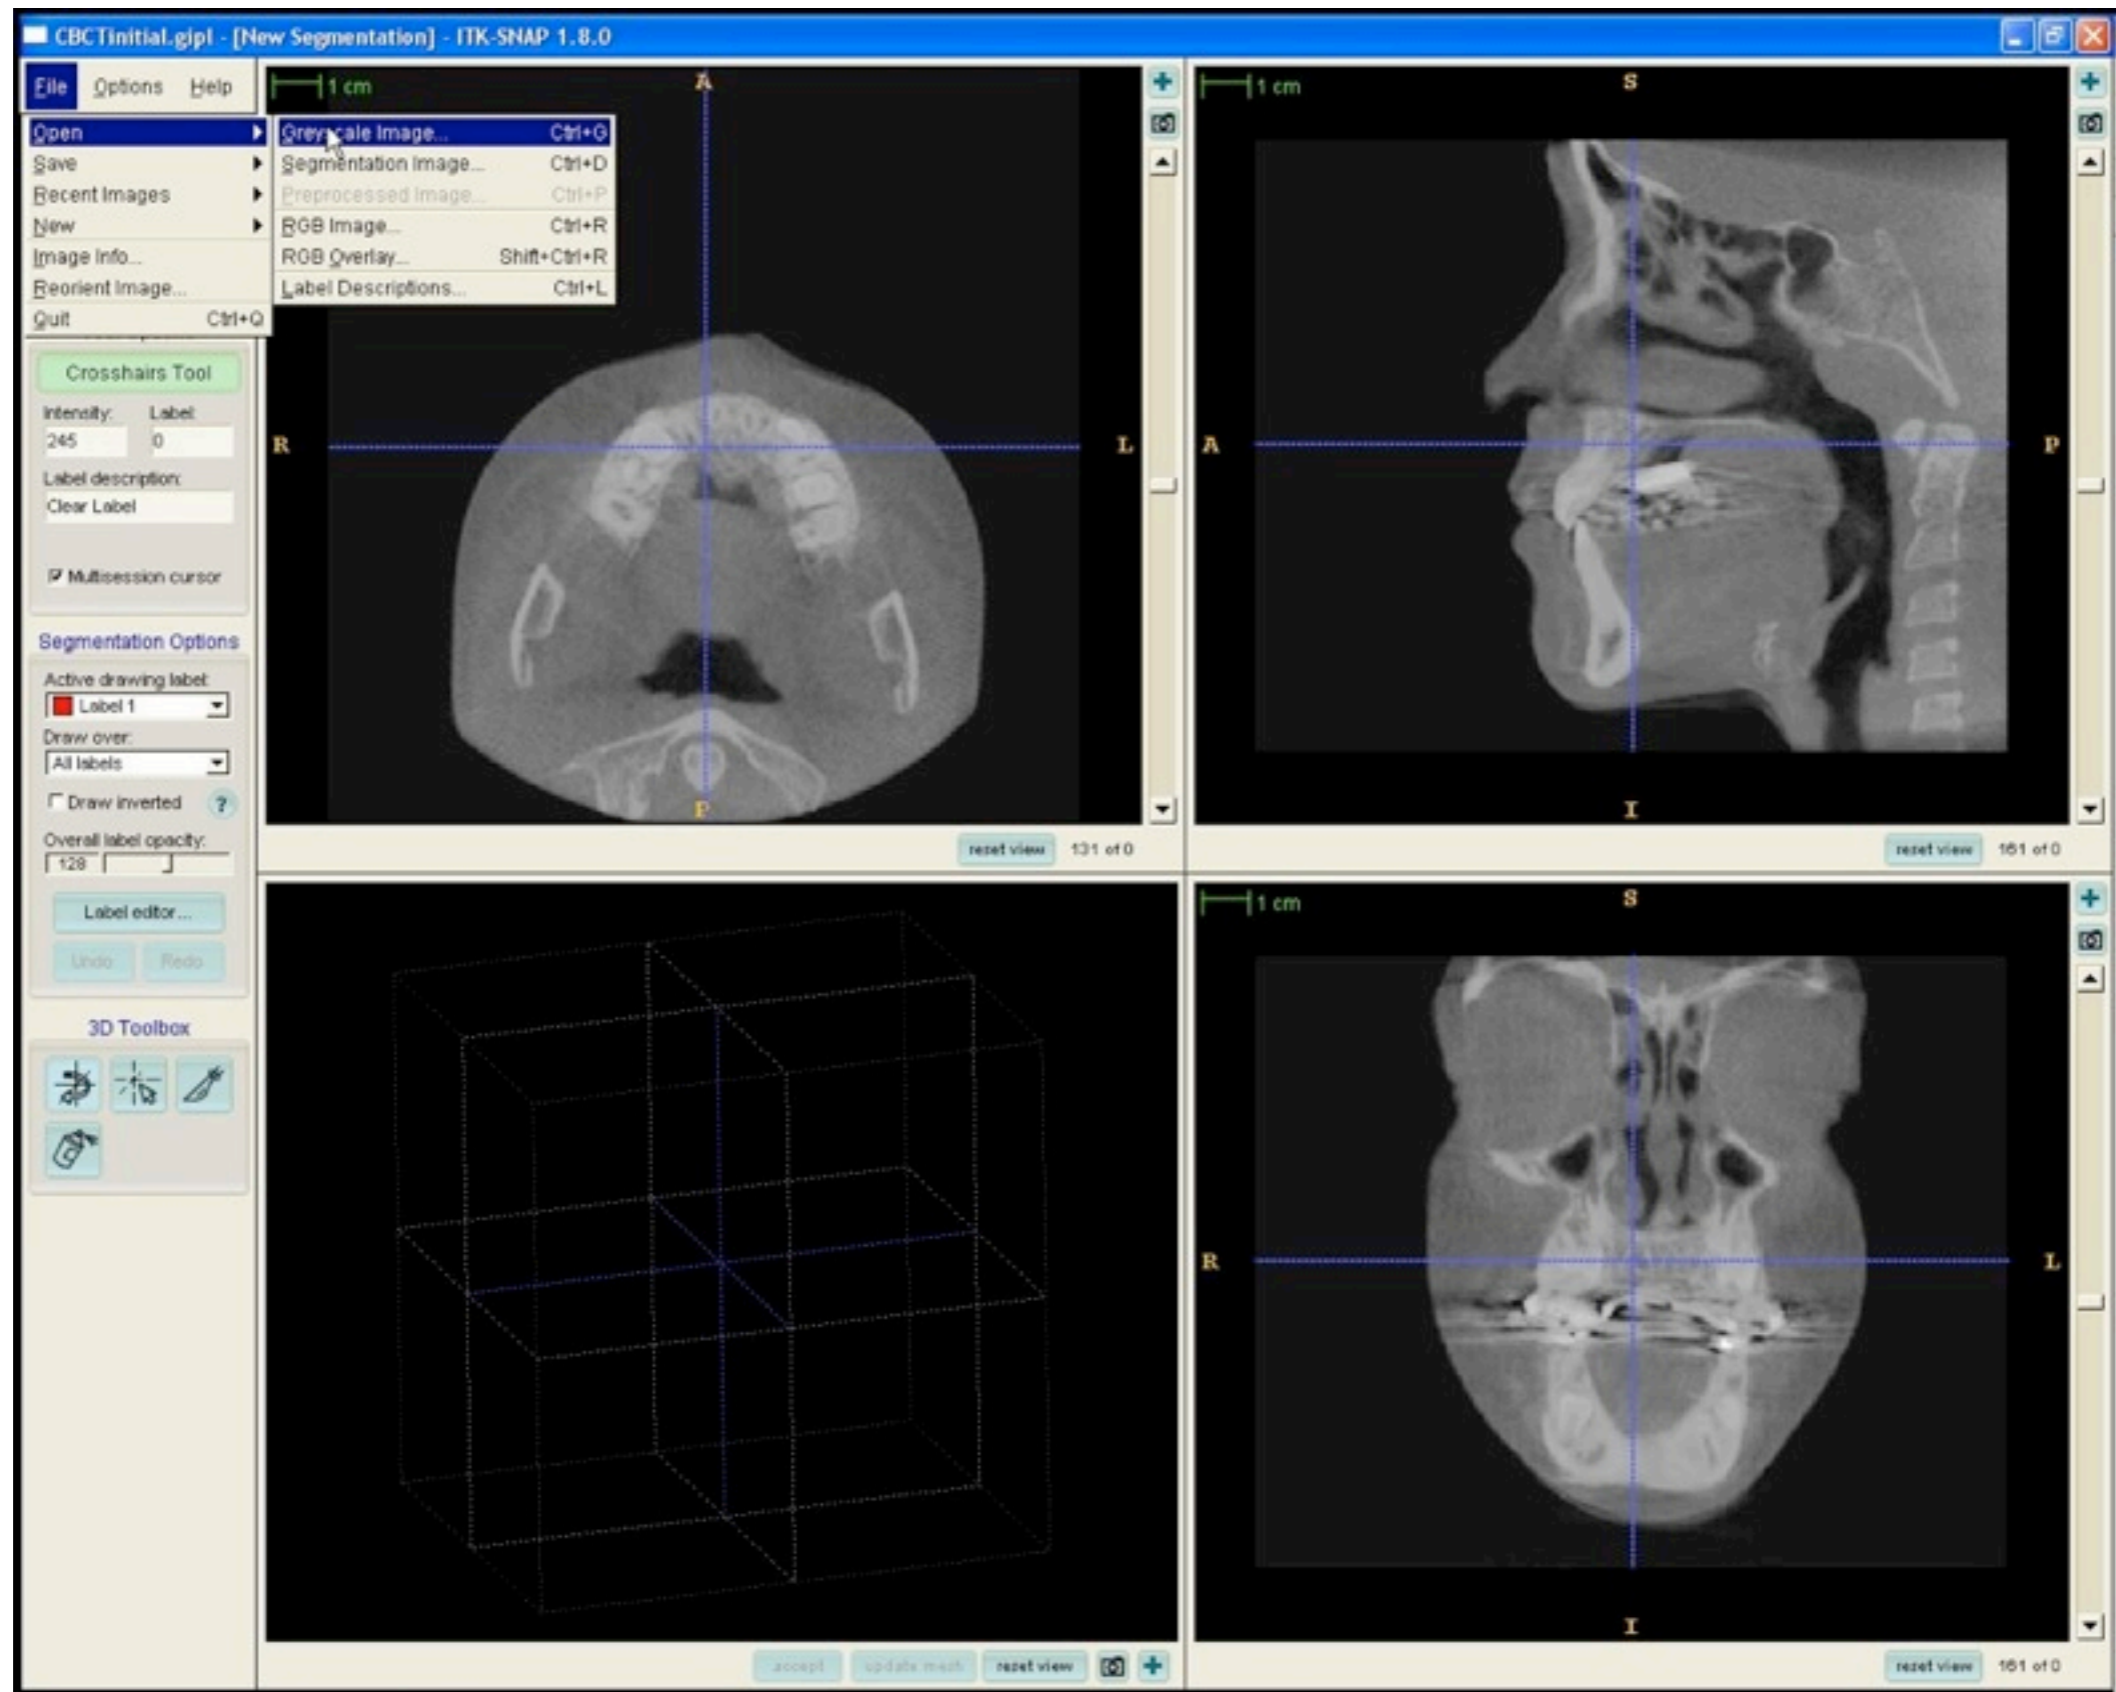


Wizard for loading a greyscale image

Select a greyscale image to load:

Image file name:

Image file format:

 Select or

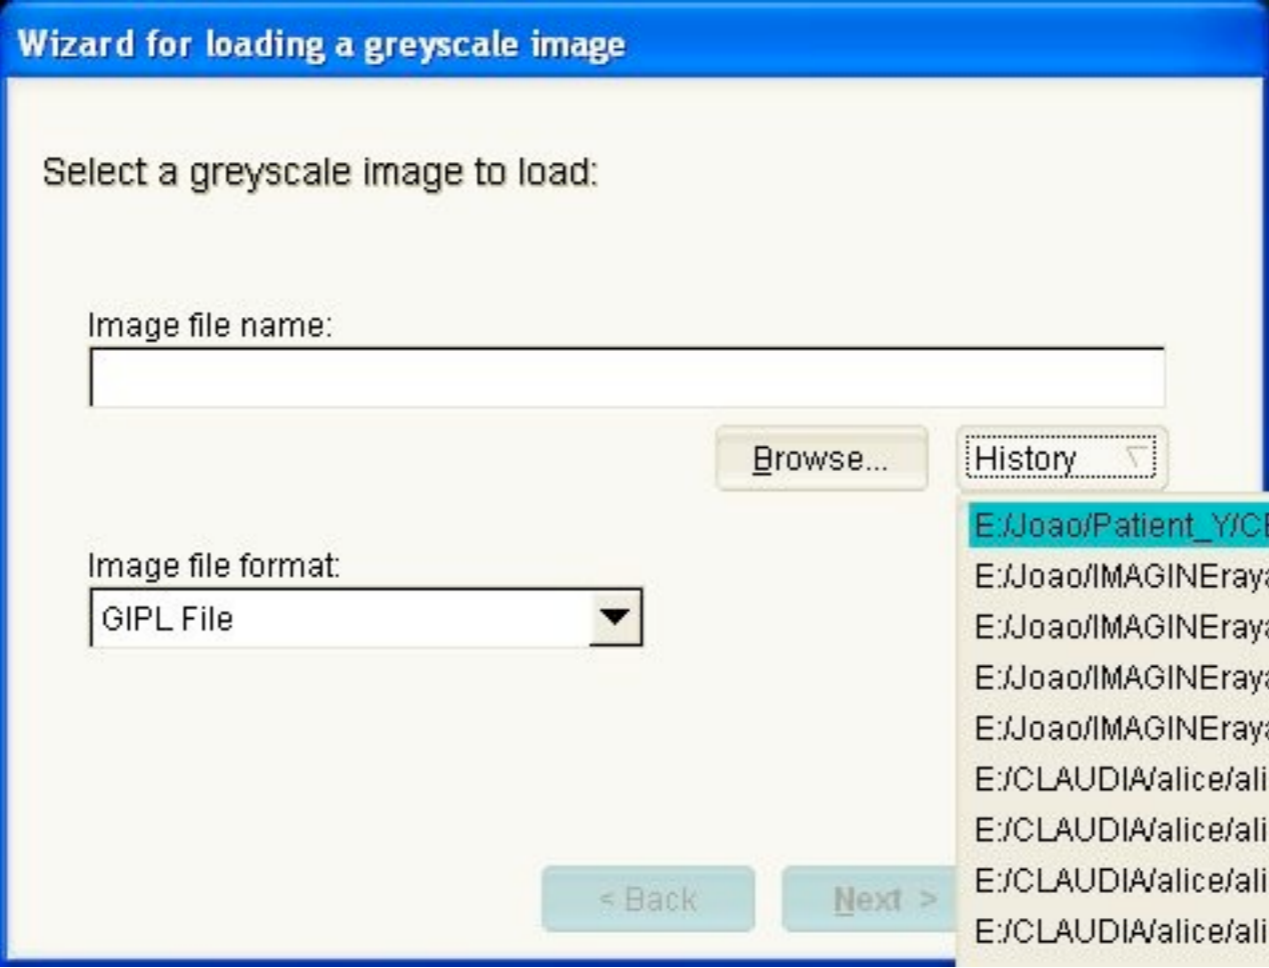




Wizard for loading a greyscale image

Select a greyscale image to load:

Image file name:

Image file format:

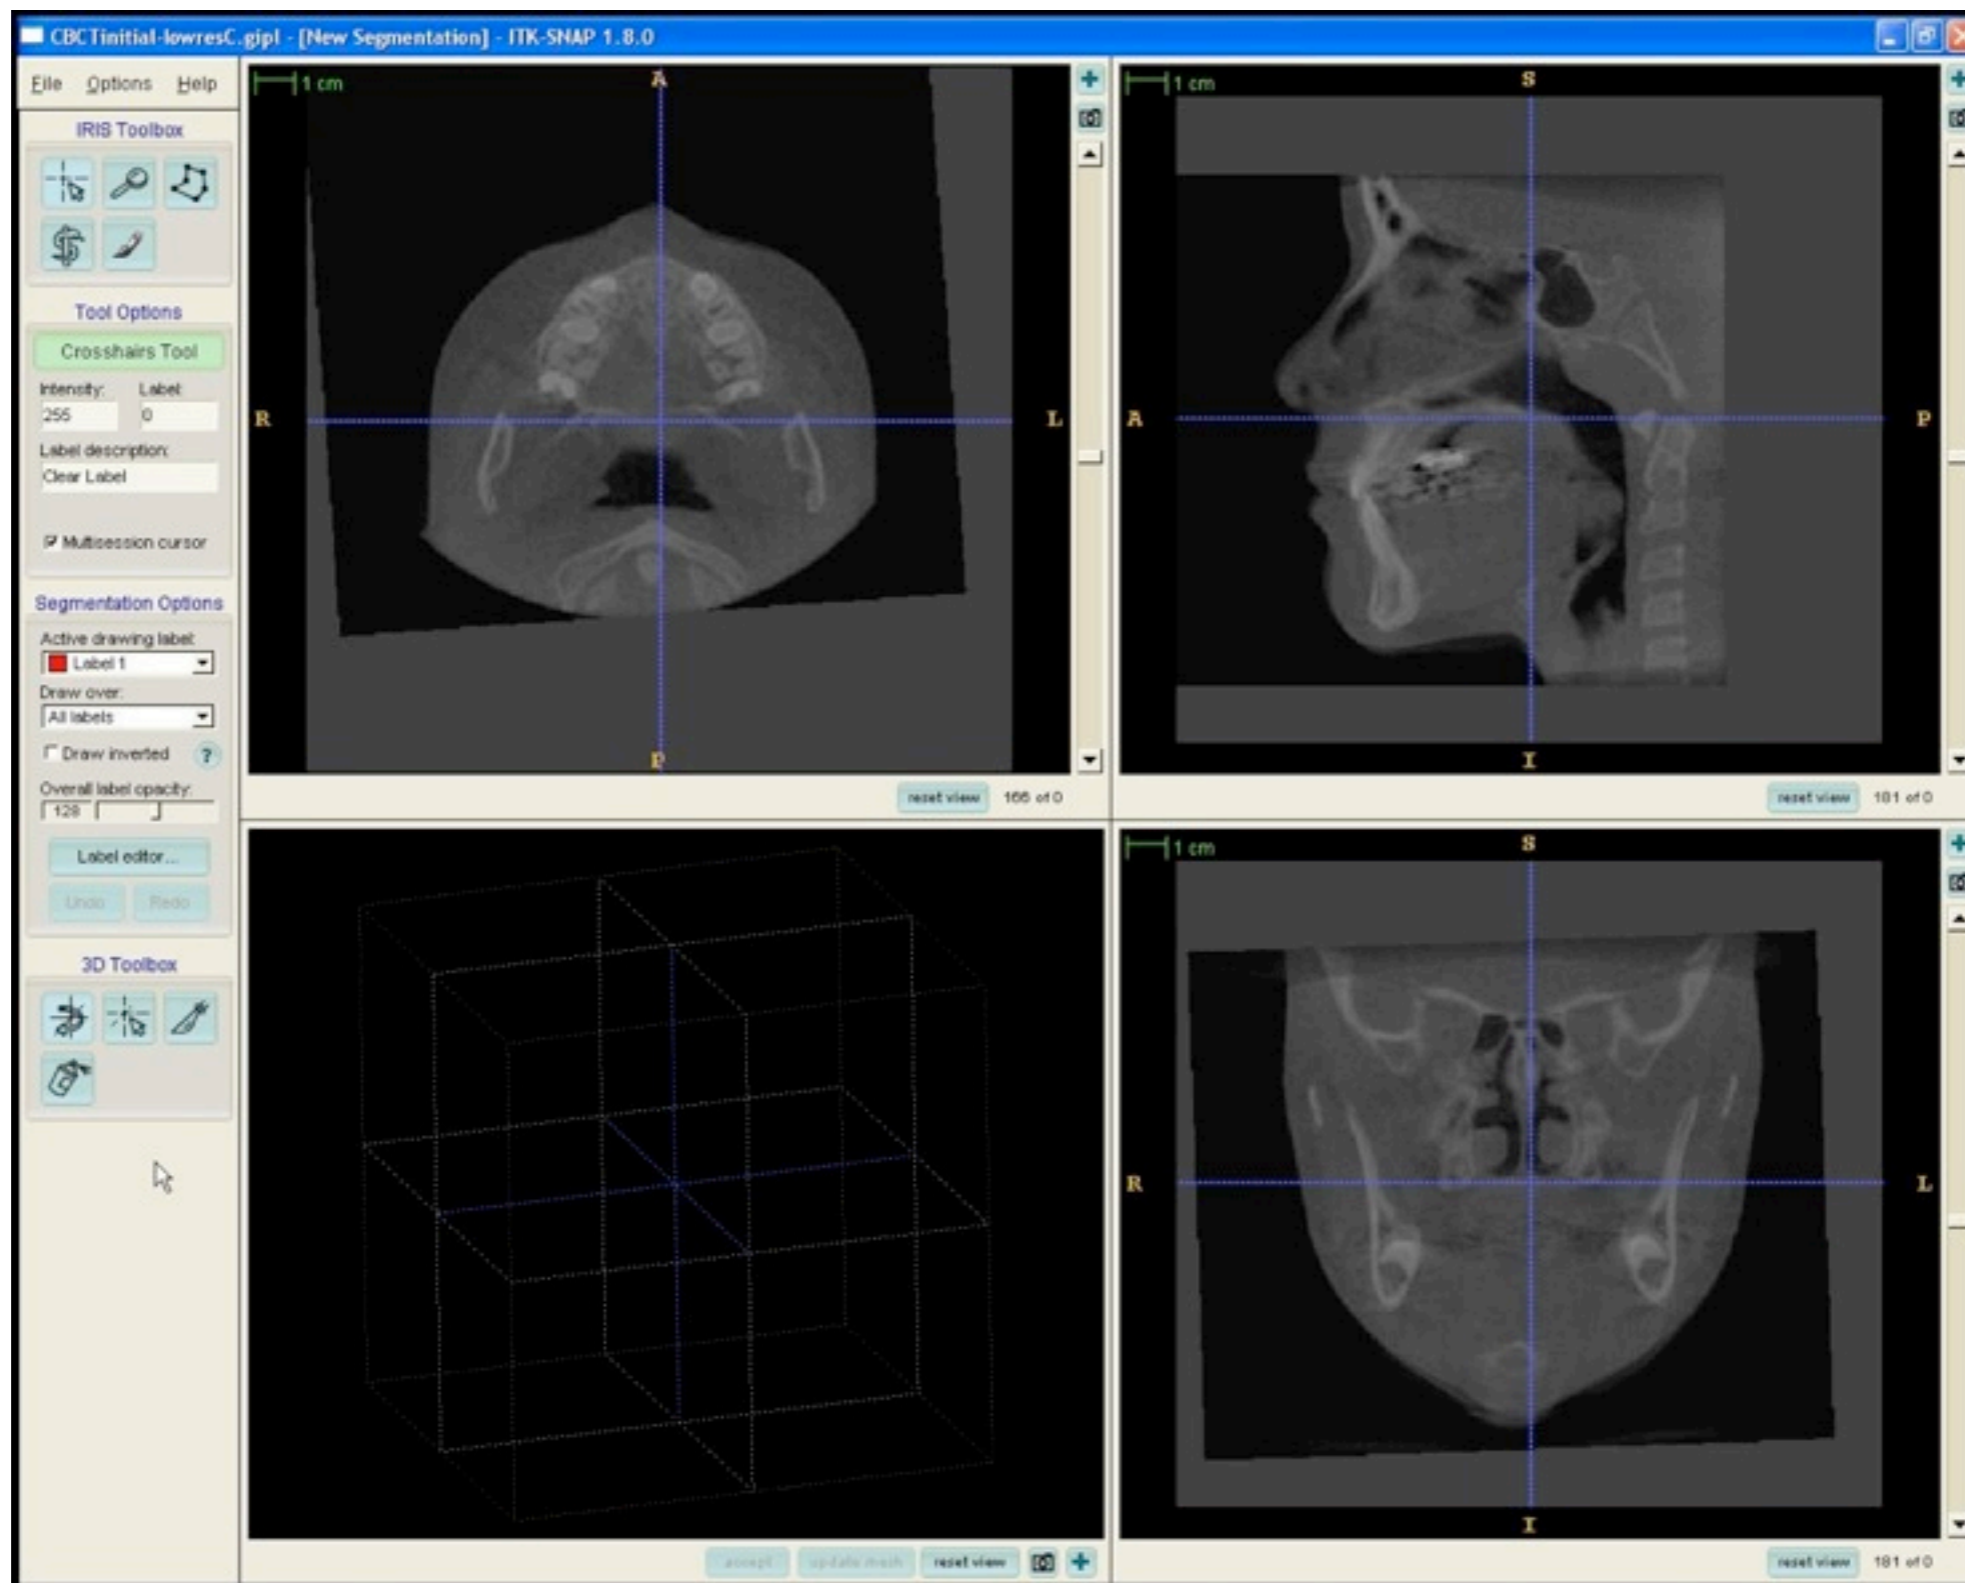

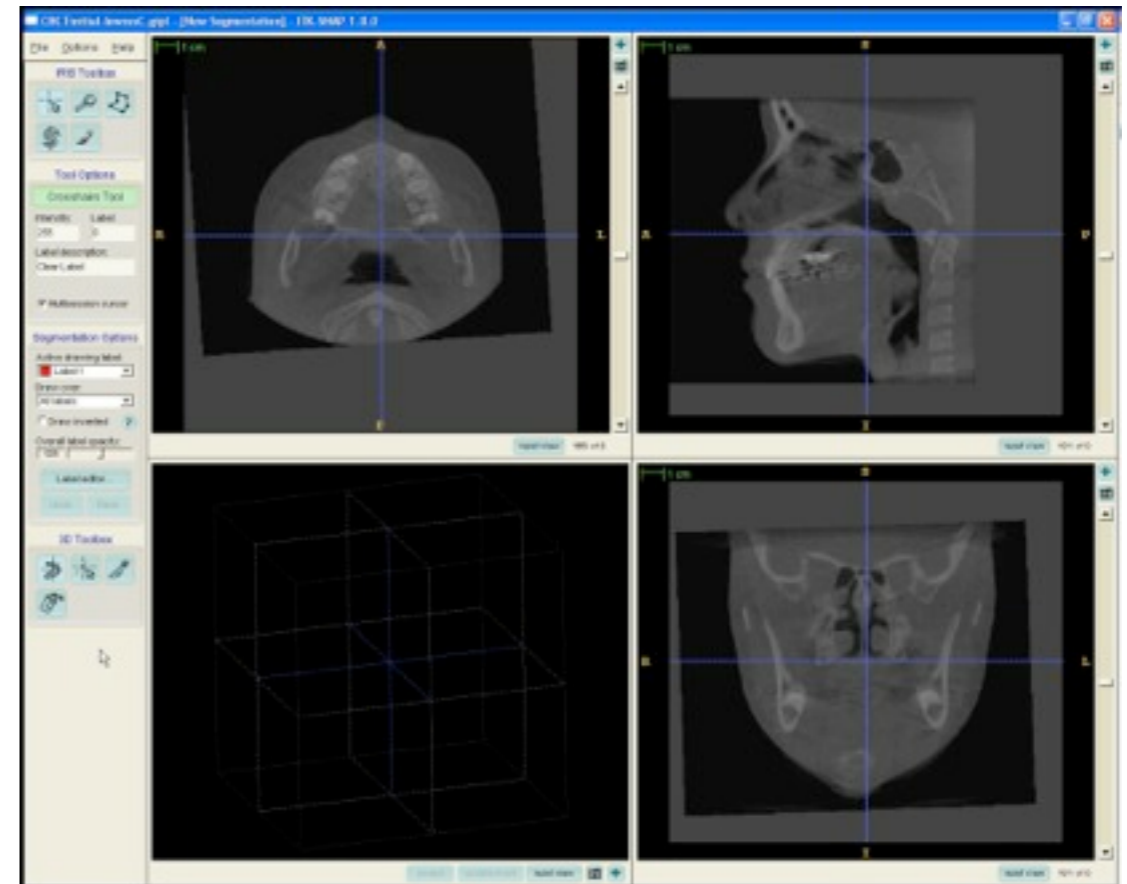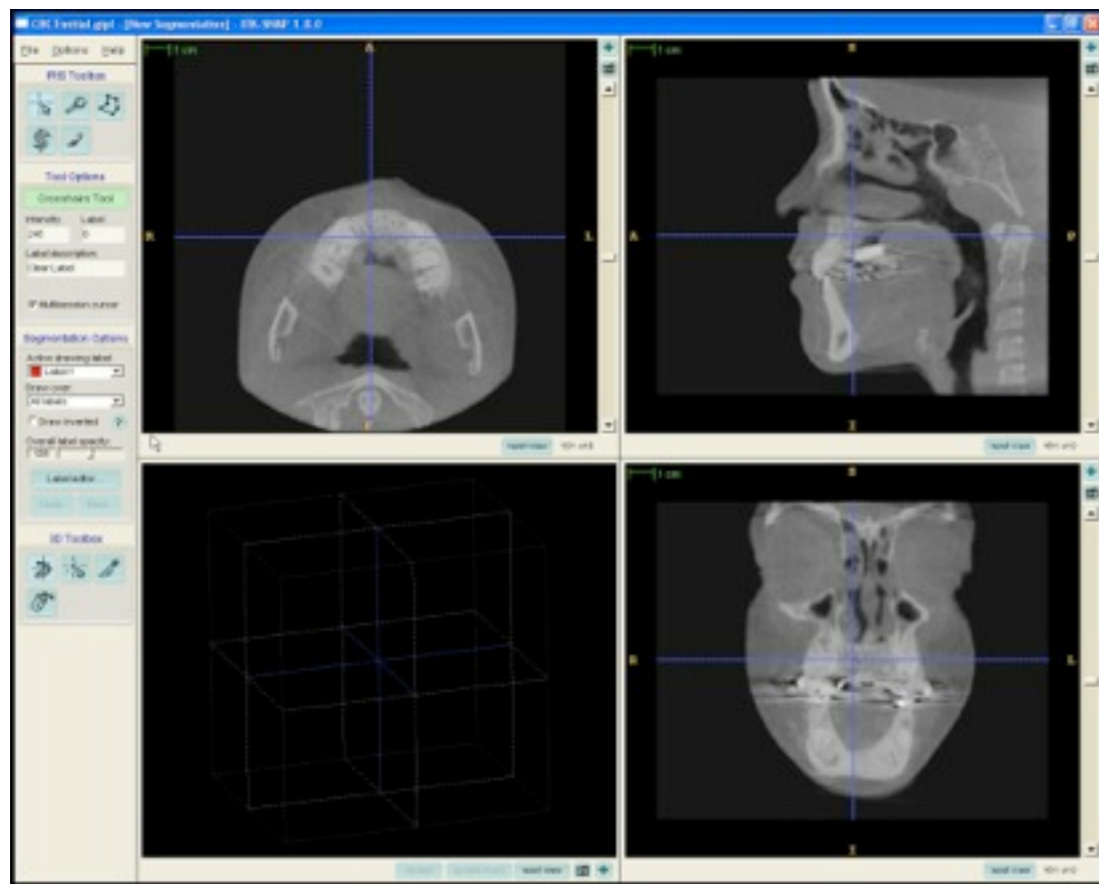

After Registration

After Registration

